


GATE INSTALLATION FRAMING (RES)

LEFT HAND GATE INSTALLATION SHOWN

GATE SILL FLANGE SHOULD BE PLACED FLUSH WITH FASCIA BOARD

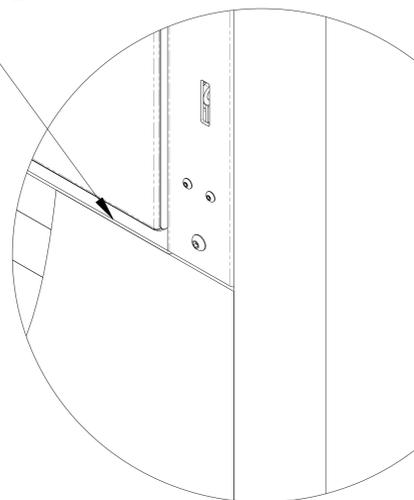


DETAIL B
SCALE 1 : 2


GATE
OPENS
THIS
SIDE

NOTES:


1. ALL FRAMING MUST BE CAPABLE OF WITHSTANDING A 200 LBS CONCENTRATED LOAD IN ALL DIRECTIONS.
2. REFER TO THE TECHNICAL DRAWINGS FOR ADDITIONAL INSTALLATION DIMENSIONS.

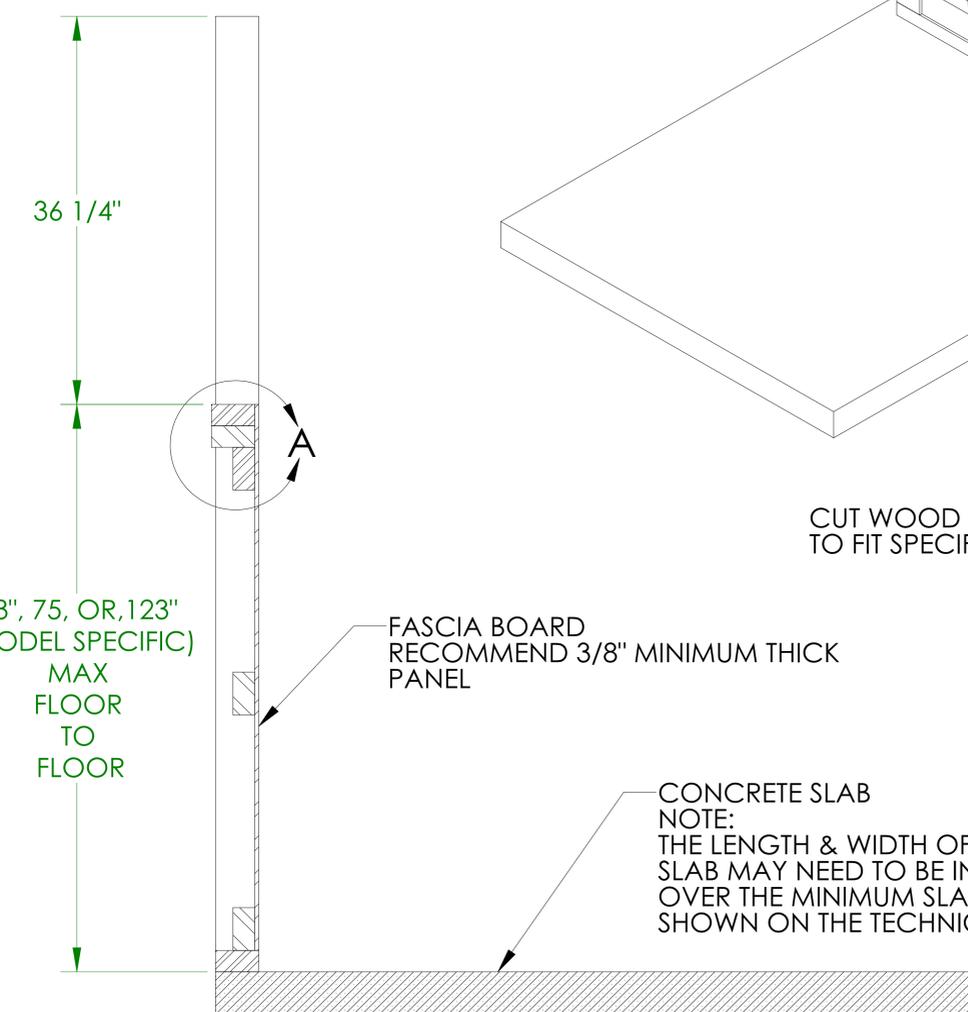

SECTION A-A

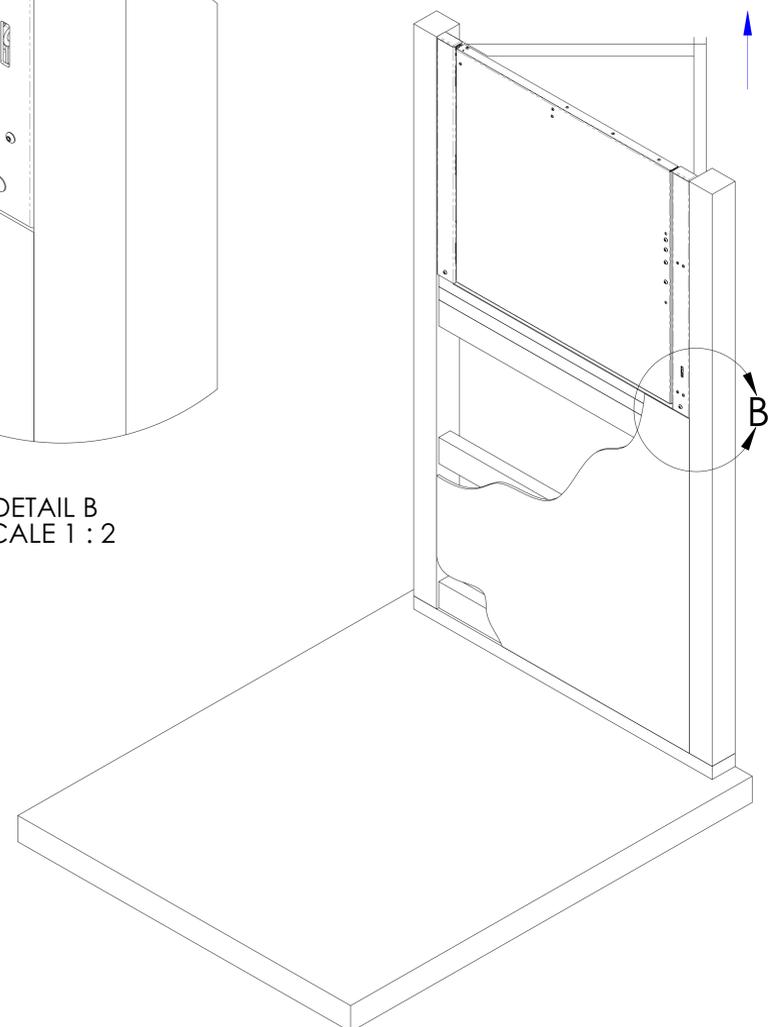


CUT WOOD AS NEEDED TO FIT SPECIFIC APPLICATION.

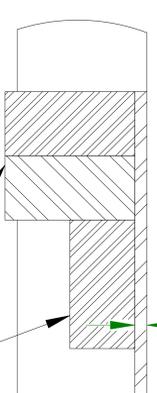

DETAIL A
SCALE 1 : 2

2" X 4" TO BE ANCHORED TO CONCRETE SLAB

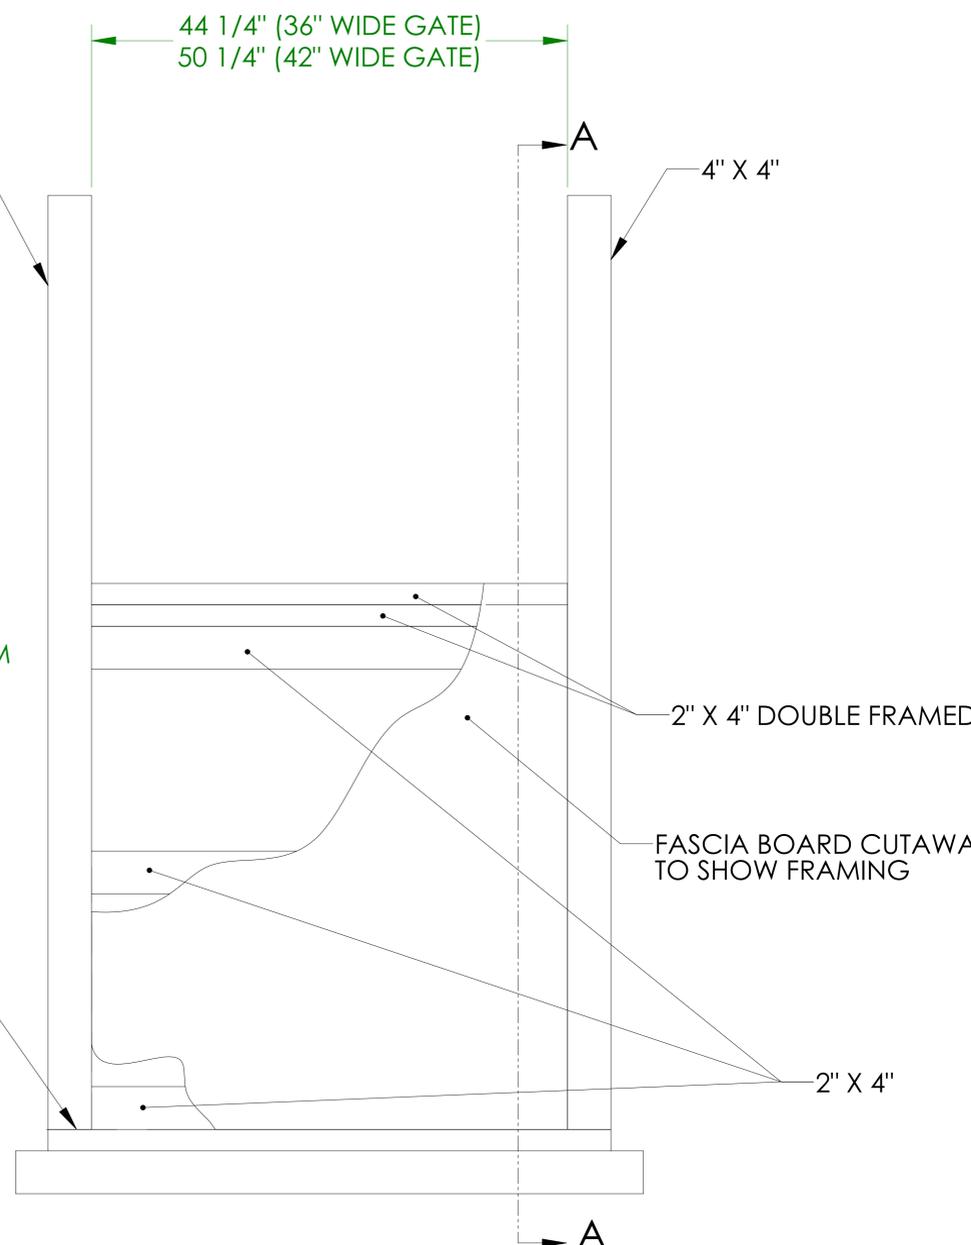

ILS-01562
SHEET 1 OF 1
REV. 0 (7683)(11/03/22)(TAK)

