


FLUSH MOUNT ALUMINUM DOOR DETAIL (LH SWING) BRUNO VERTICAL PLATFORM LIFT

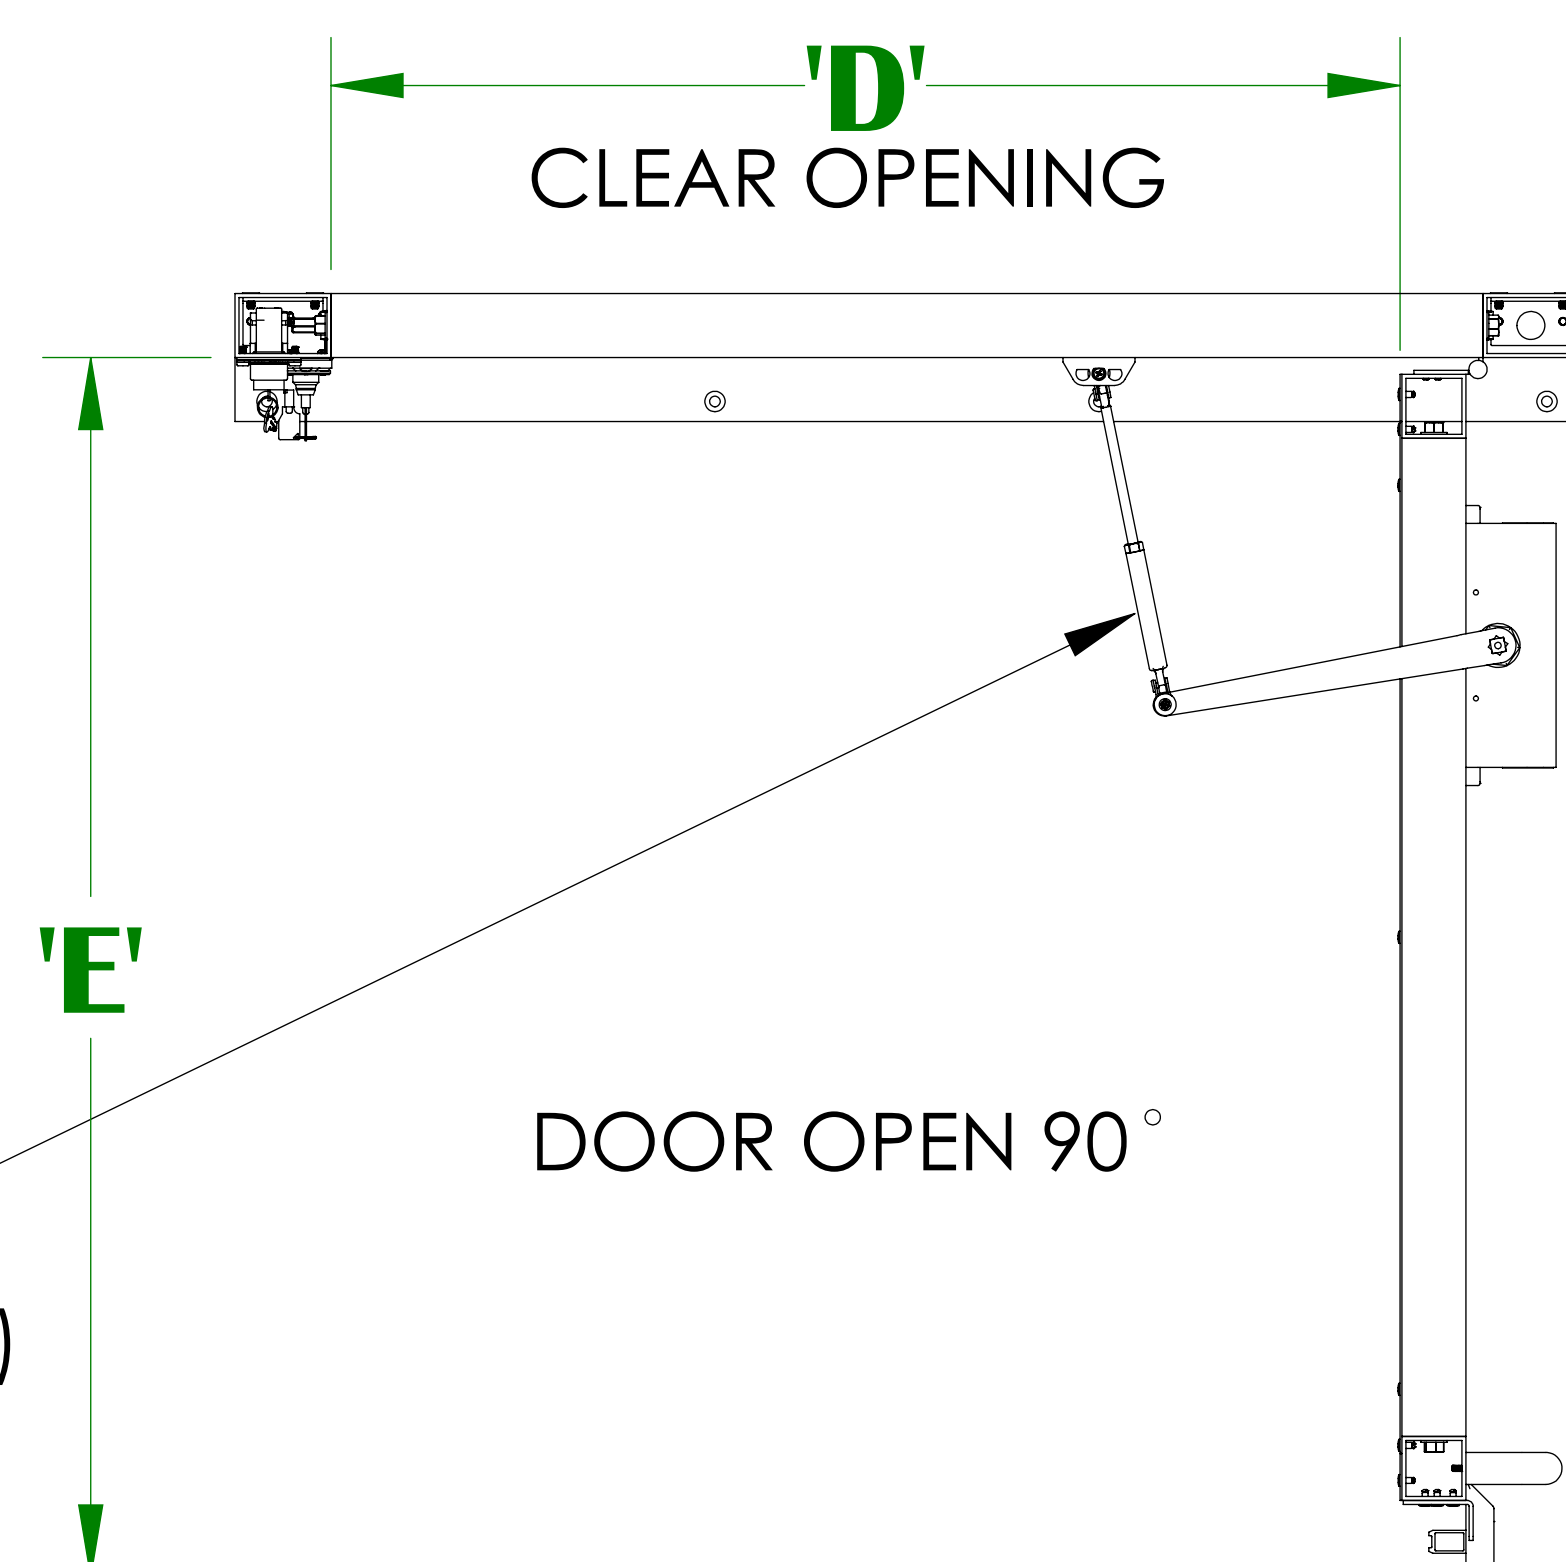


DESCRIPTION	'A'	'B'	'C'	'D'	'E'
FLUSH MOUNT 36" ALUMINUM DOOR	36"	42"	44"	33-3/8"	38-1/8"
FLUSH MOUNT 45" ALUMINUM DOOR	45"	51"	53"	42-3/8"	47-1/8"

NOTES:

1. TWO PIECES OF VERTICLE FRAME TRIM IS INCLUDED. TRIM CAN BE USED AS NEEDED WHEN INSTALLING THE DOOR.
2. DEALER TO SUPPLY MOUNTING HARDWARE (ie. SCREWS, ANCHORS).
3. PANEL INSERT MATERIAL IS EITHER CLEAR ACRYLIC OR BRONZE ACRYLIC. PANELS ARE SHIPPED WITH A PROTECTIVE PAPER TO BE REMOVED BY INSTALLER.

DOOR CLOSER PROVIDED
(REMOVED BY INSTALLER IF
INSTALLING A DOOR OPENER)

DOOR OPEN 90°

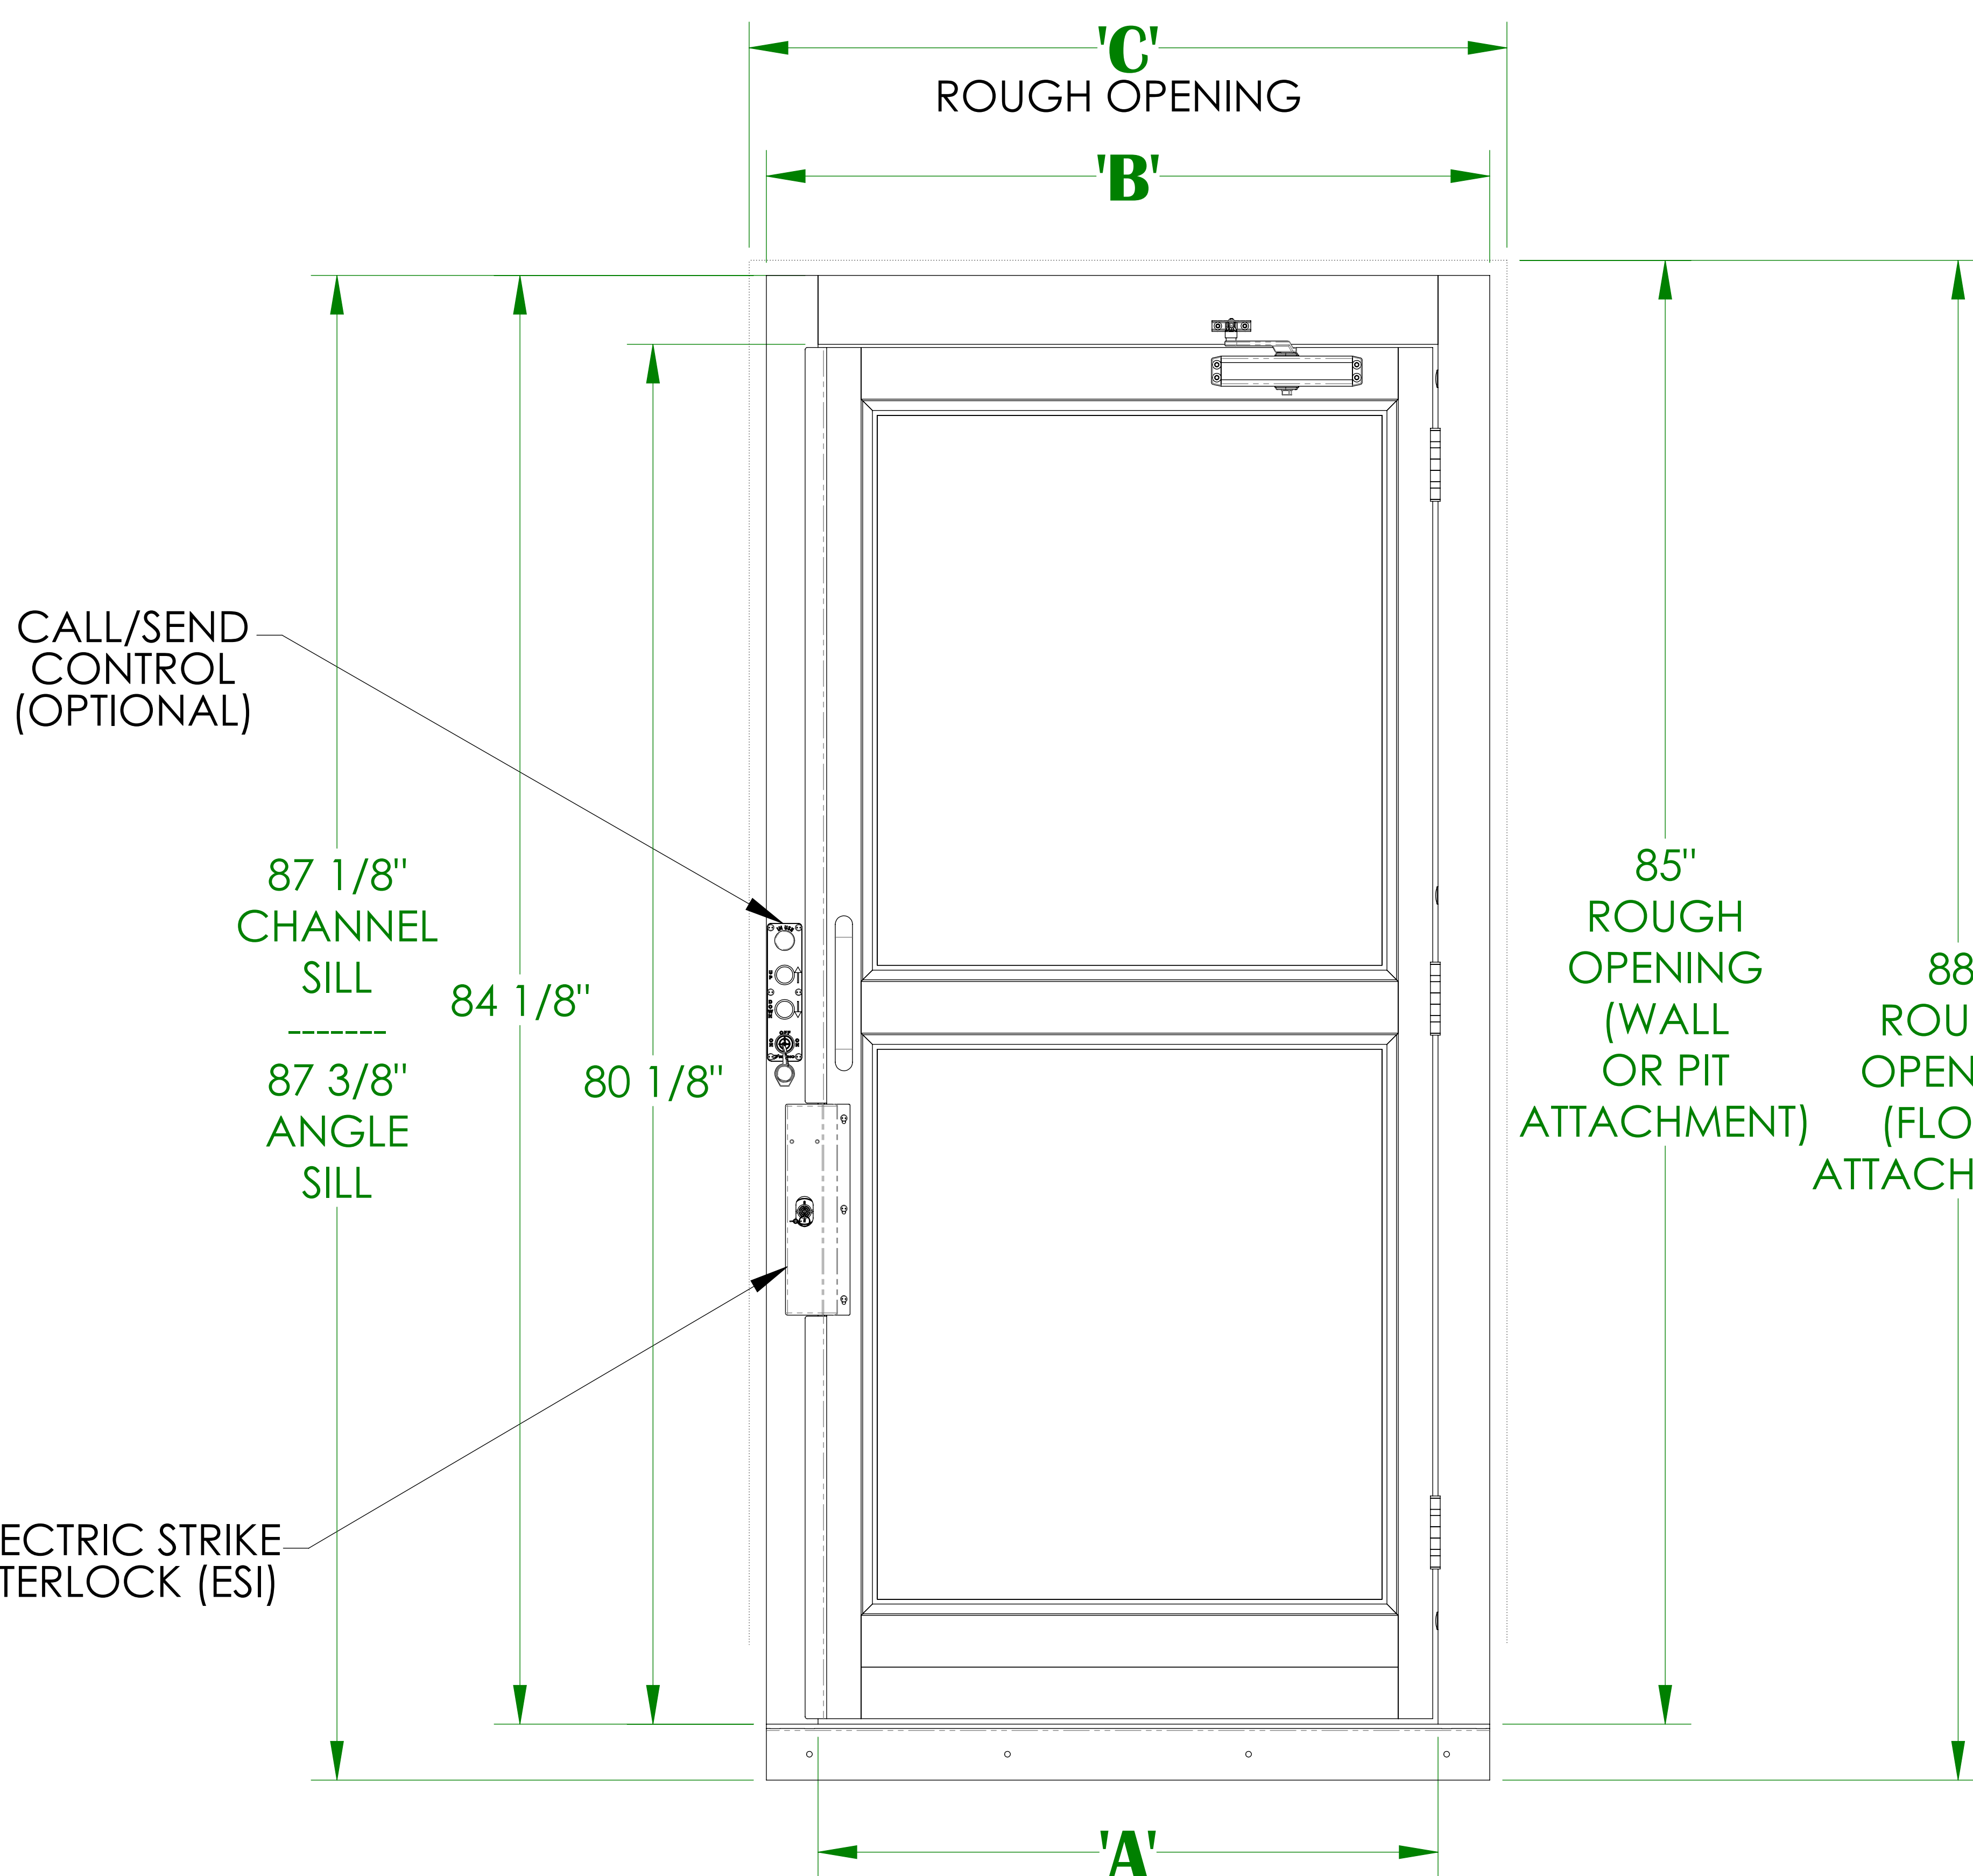

CALL/SEND
CONTROL
(OPTIONAL)

87 1/8"
CHANNEL
SILL


84 1/8"

87 3/8"
ANGLE
SILL

80 1/8"


85"
ROUGH
OPENING
(WALL
OR PIT
ATTACHMENT)

88"
ROUGH
OPENING
(FLOOR
ATTACHMENT)

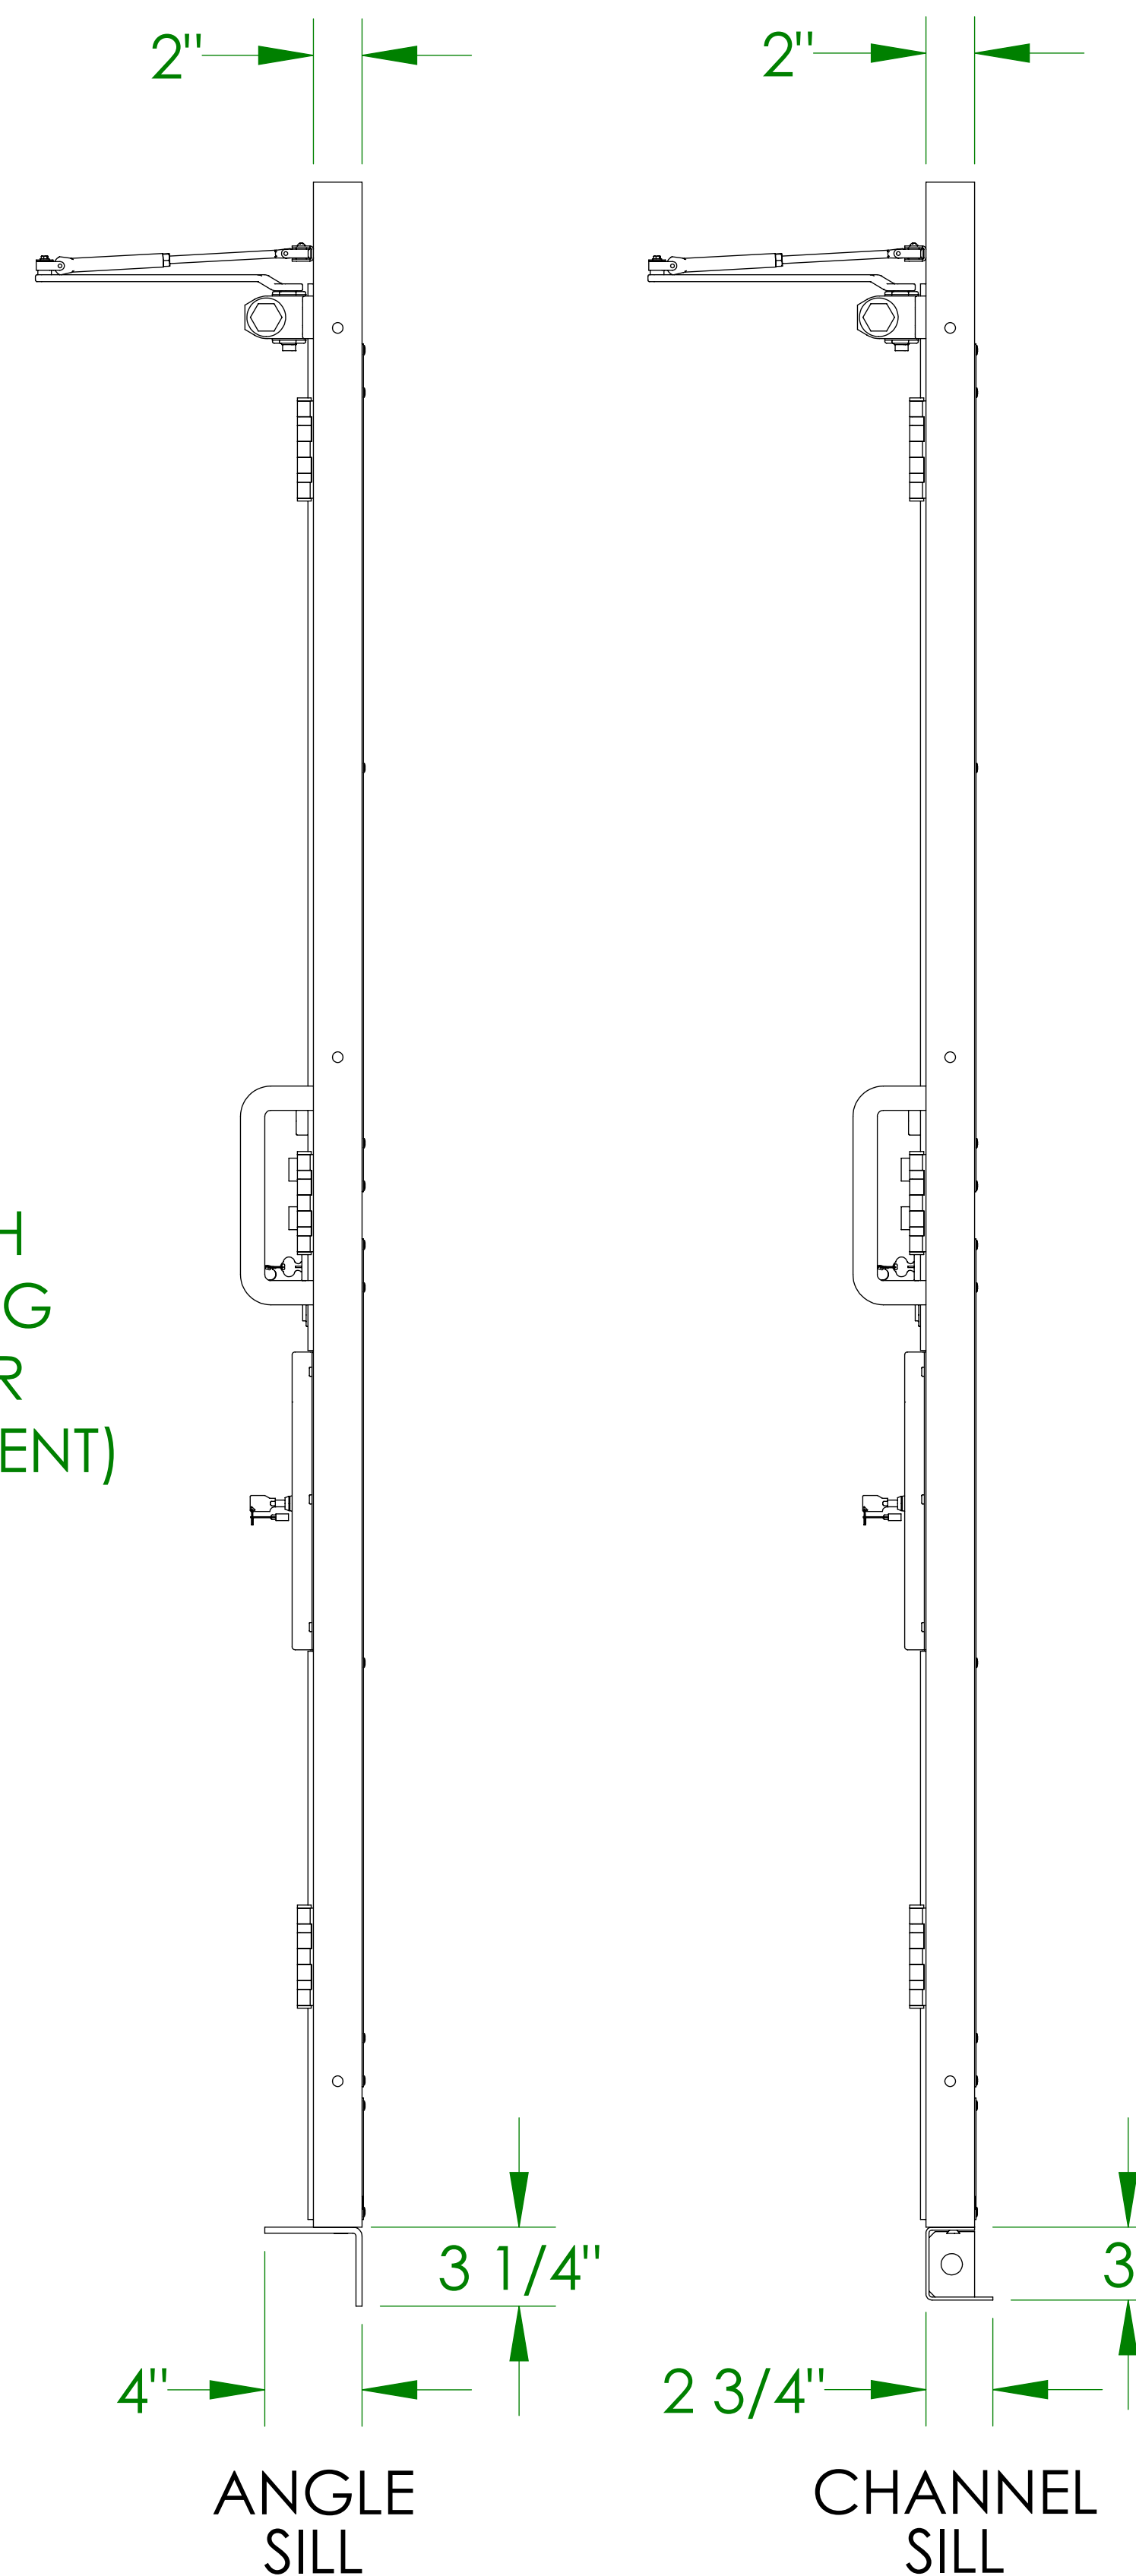

ANGLE
SILL

CHANNEL
SILL

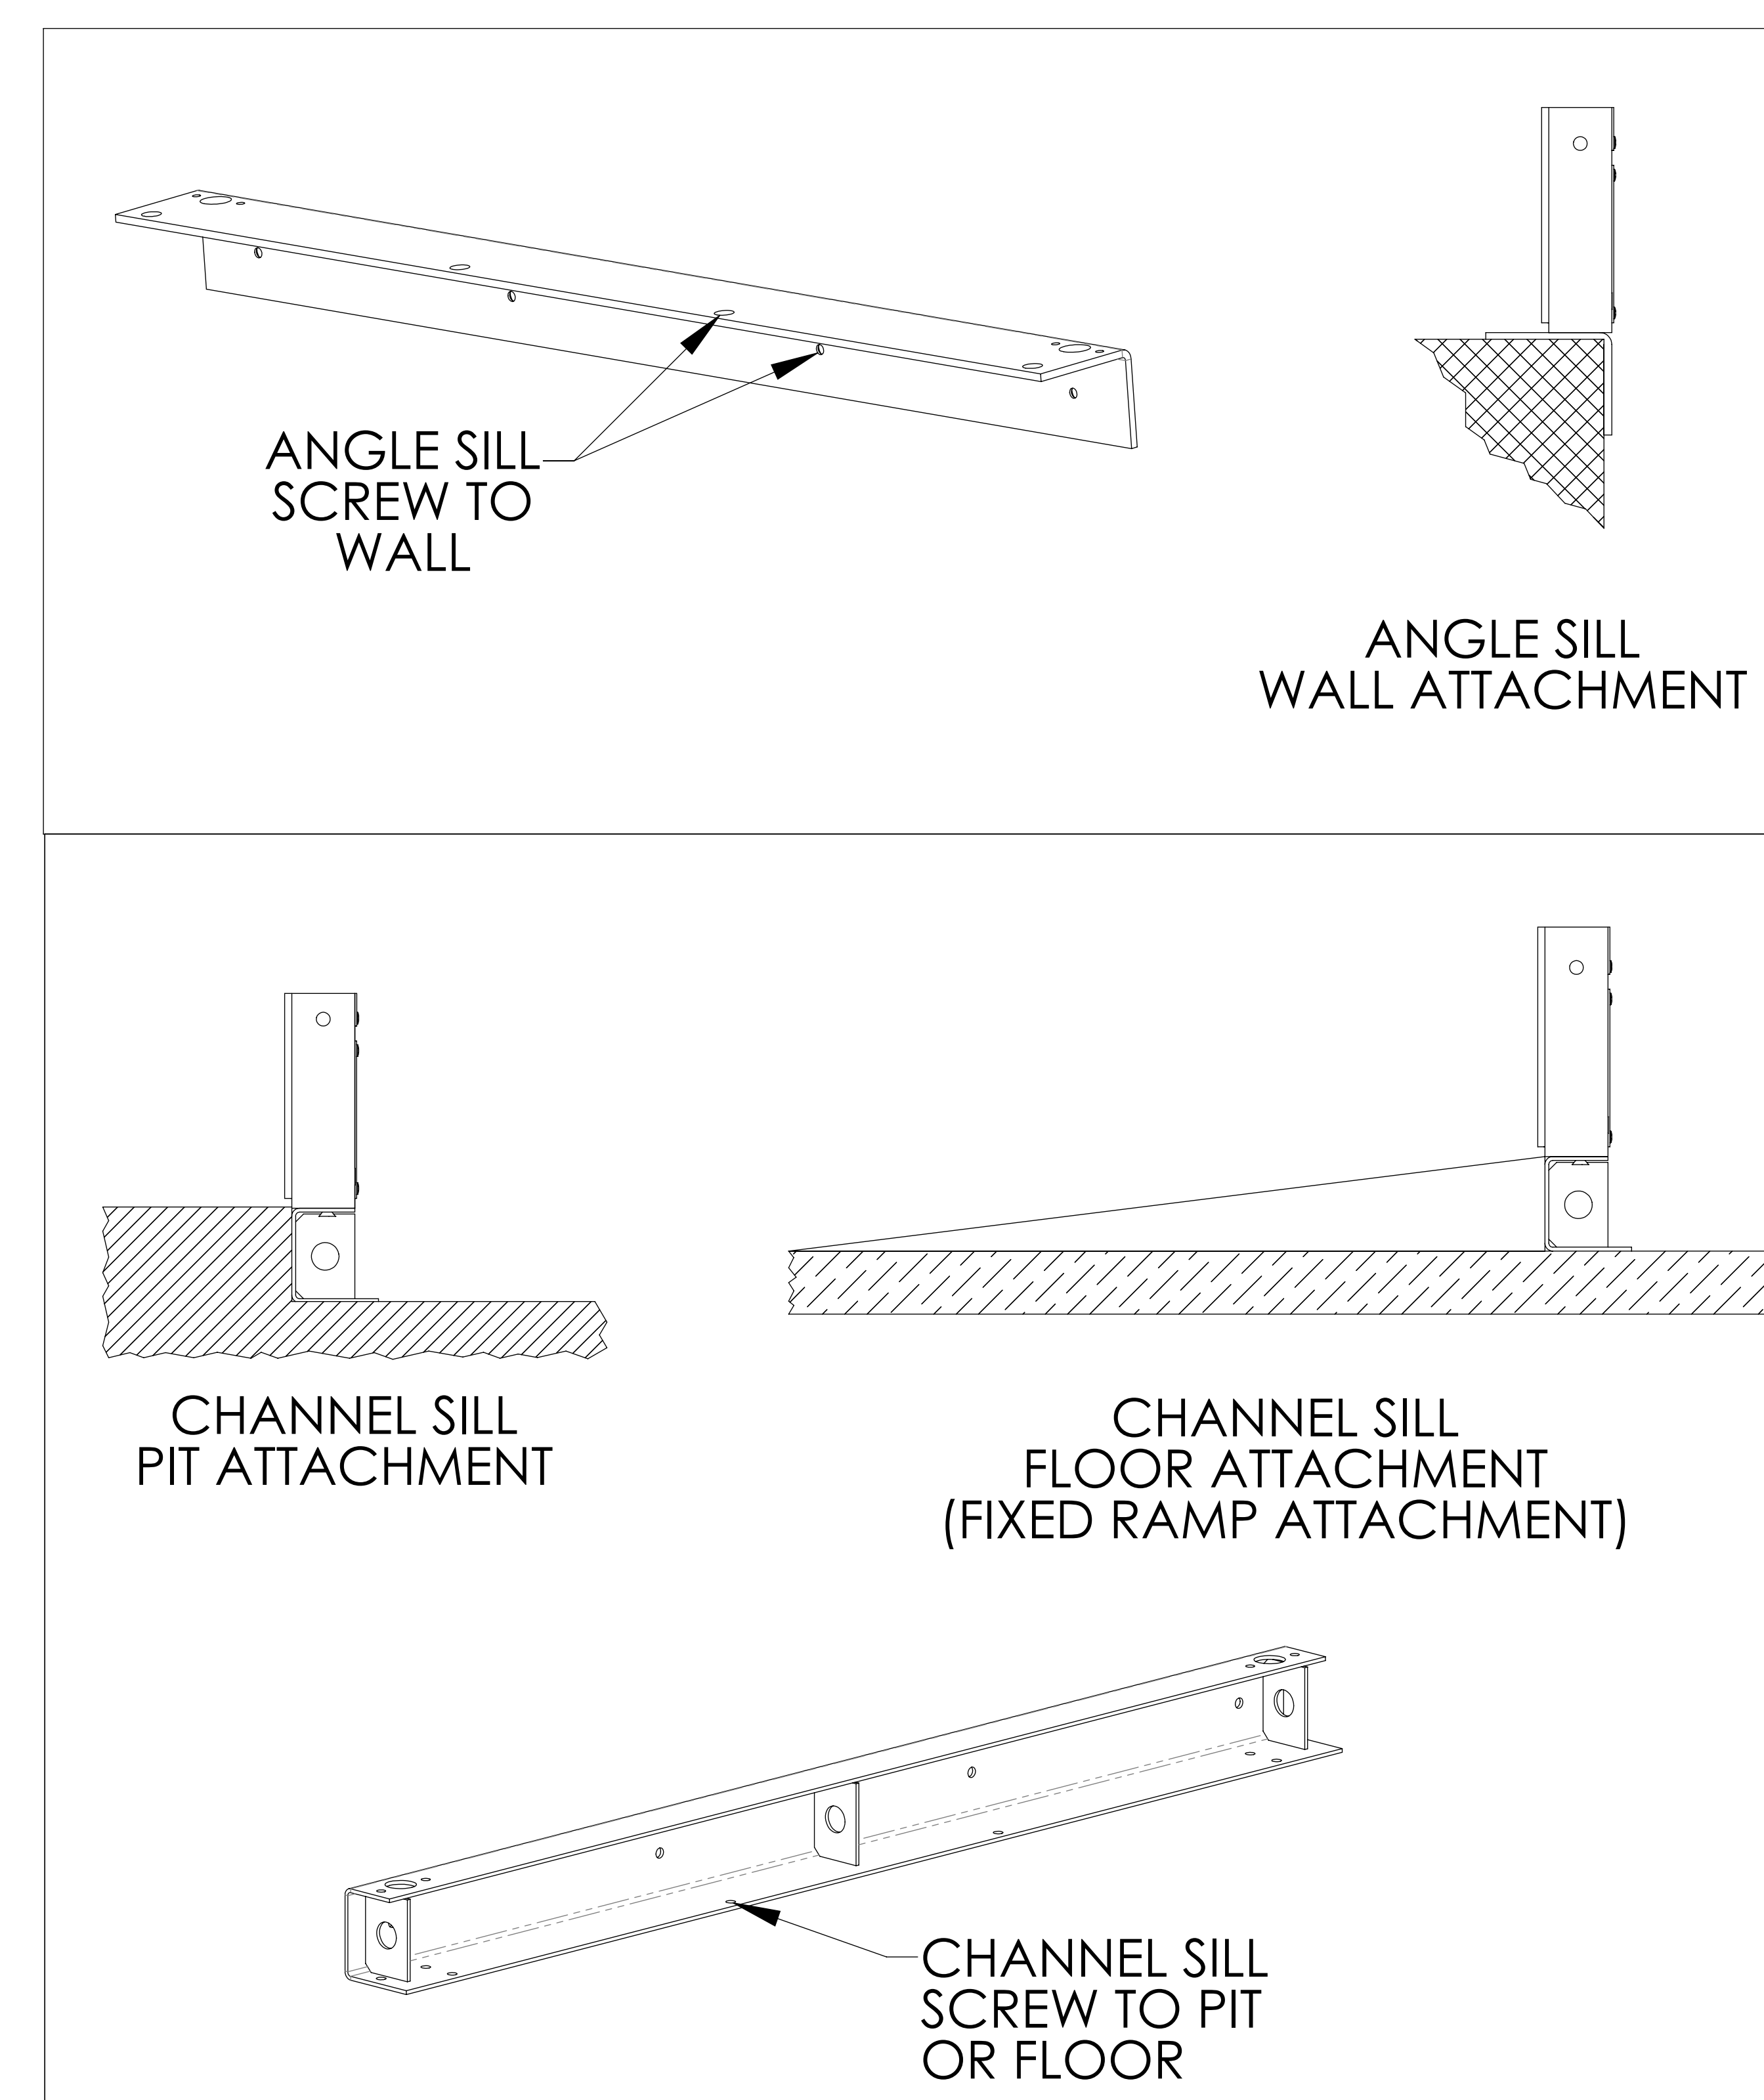

ANGLE SILL
SCREW TO
WALL


ANGLE SILL
WALL ATTACHMENT

CHANNEL SILL
PIT ATTACHMENT

CHANNEL SILL
FLOOR ATTACHMENT
(FIXED RAMP ATTACHMENT)

CHANNEL SILL
SCREW TO PIT
OR FLOOR


ILS-01194
SHEET 1 OF 5
REV. 1 (6086)(3/15/16)(DPG)

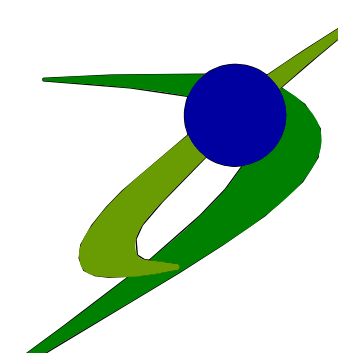 **BRUNO**[®]
for your independence

©Bruno Independent Living Aids, Inc.

FLUSH MOUNT ALUMINUM DOOR DETAIL (RH SWING)

BRUNO VERTICAL PLATFORM LIFT

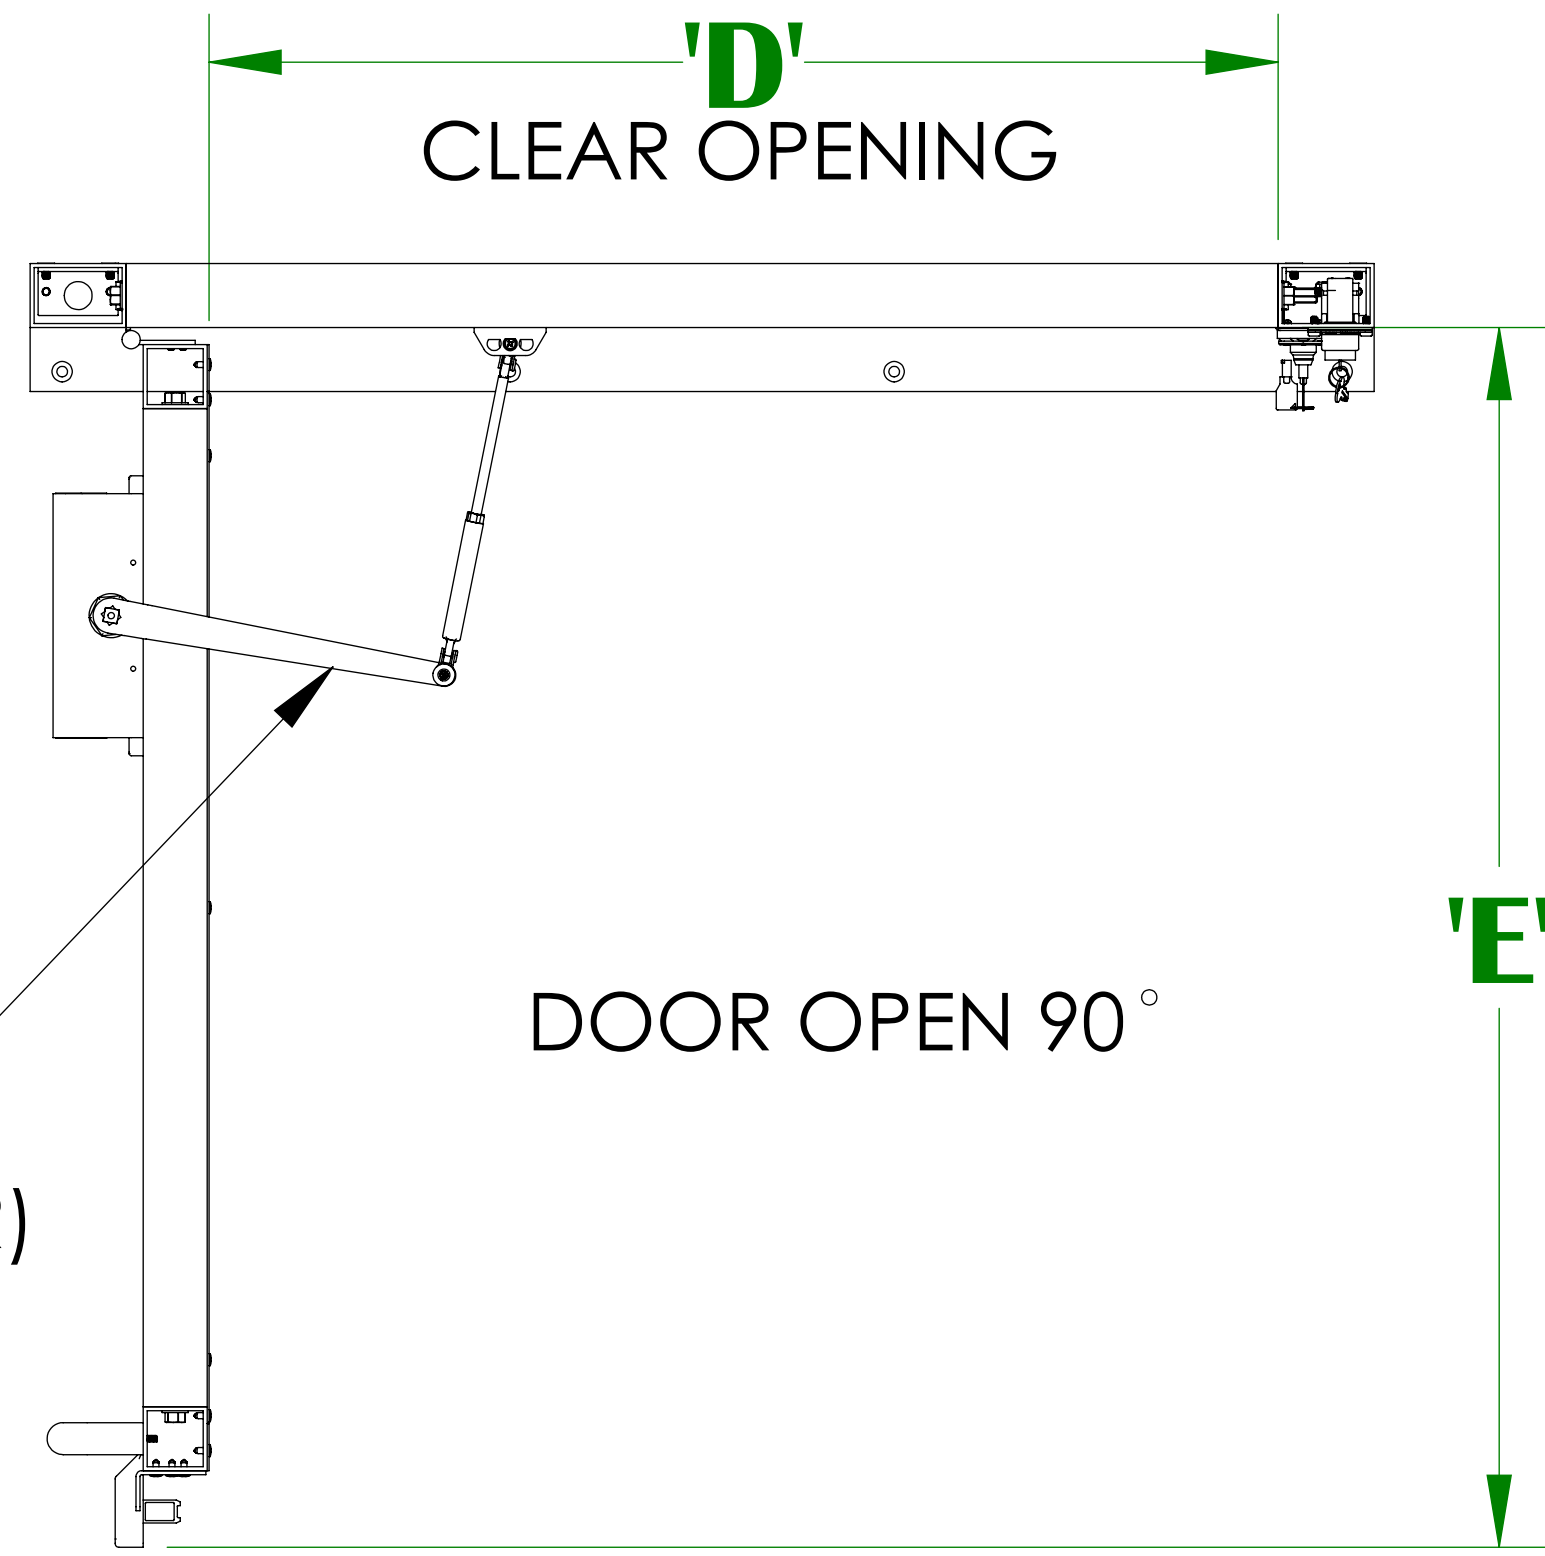




DESCRIPTION	'A'	'B'	'C'	'D'	'E'
FLUSH MOUNT 36" ALUMINUM DOOR	36"	42"	44"	33-3/8"	38-1/8"
FLUSH MOUNT 45" ALUMINUM DOOR	45"	51"	53"	42-3/8"	47-1/8"

NOTES:

1. TWO PIECES OF VERTICLE FRAME TRIM IS INCLUDED. TRIM CAN BE USED AS NEEDED WHEN INSTALLING THE DOOR.
2. DEALER TO SUPPLY MOUNTING HARDWARE (ie. SCREWS, ANCHORS).
3. PANEL INSERT MATERIAL IS EITHER CLEAR ACRYLIC OR BRONZE ACRYLIC. PANELS ARE SHIPPED WITH A PROTECTIVE PAPER TO BE REMOVED BY INSTALLER.

DOOR CLOSER PROVIDED
(REMOVED BY INSTALLER IF
INSTALLING A DOOR OPENER)

DOOR OPEN 90°

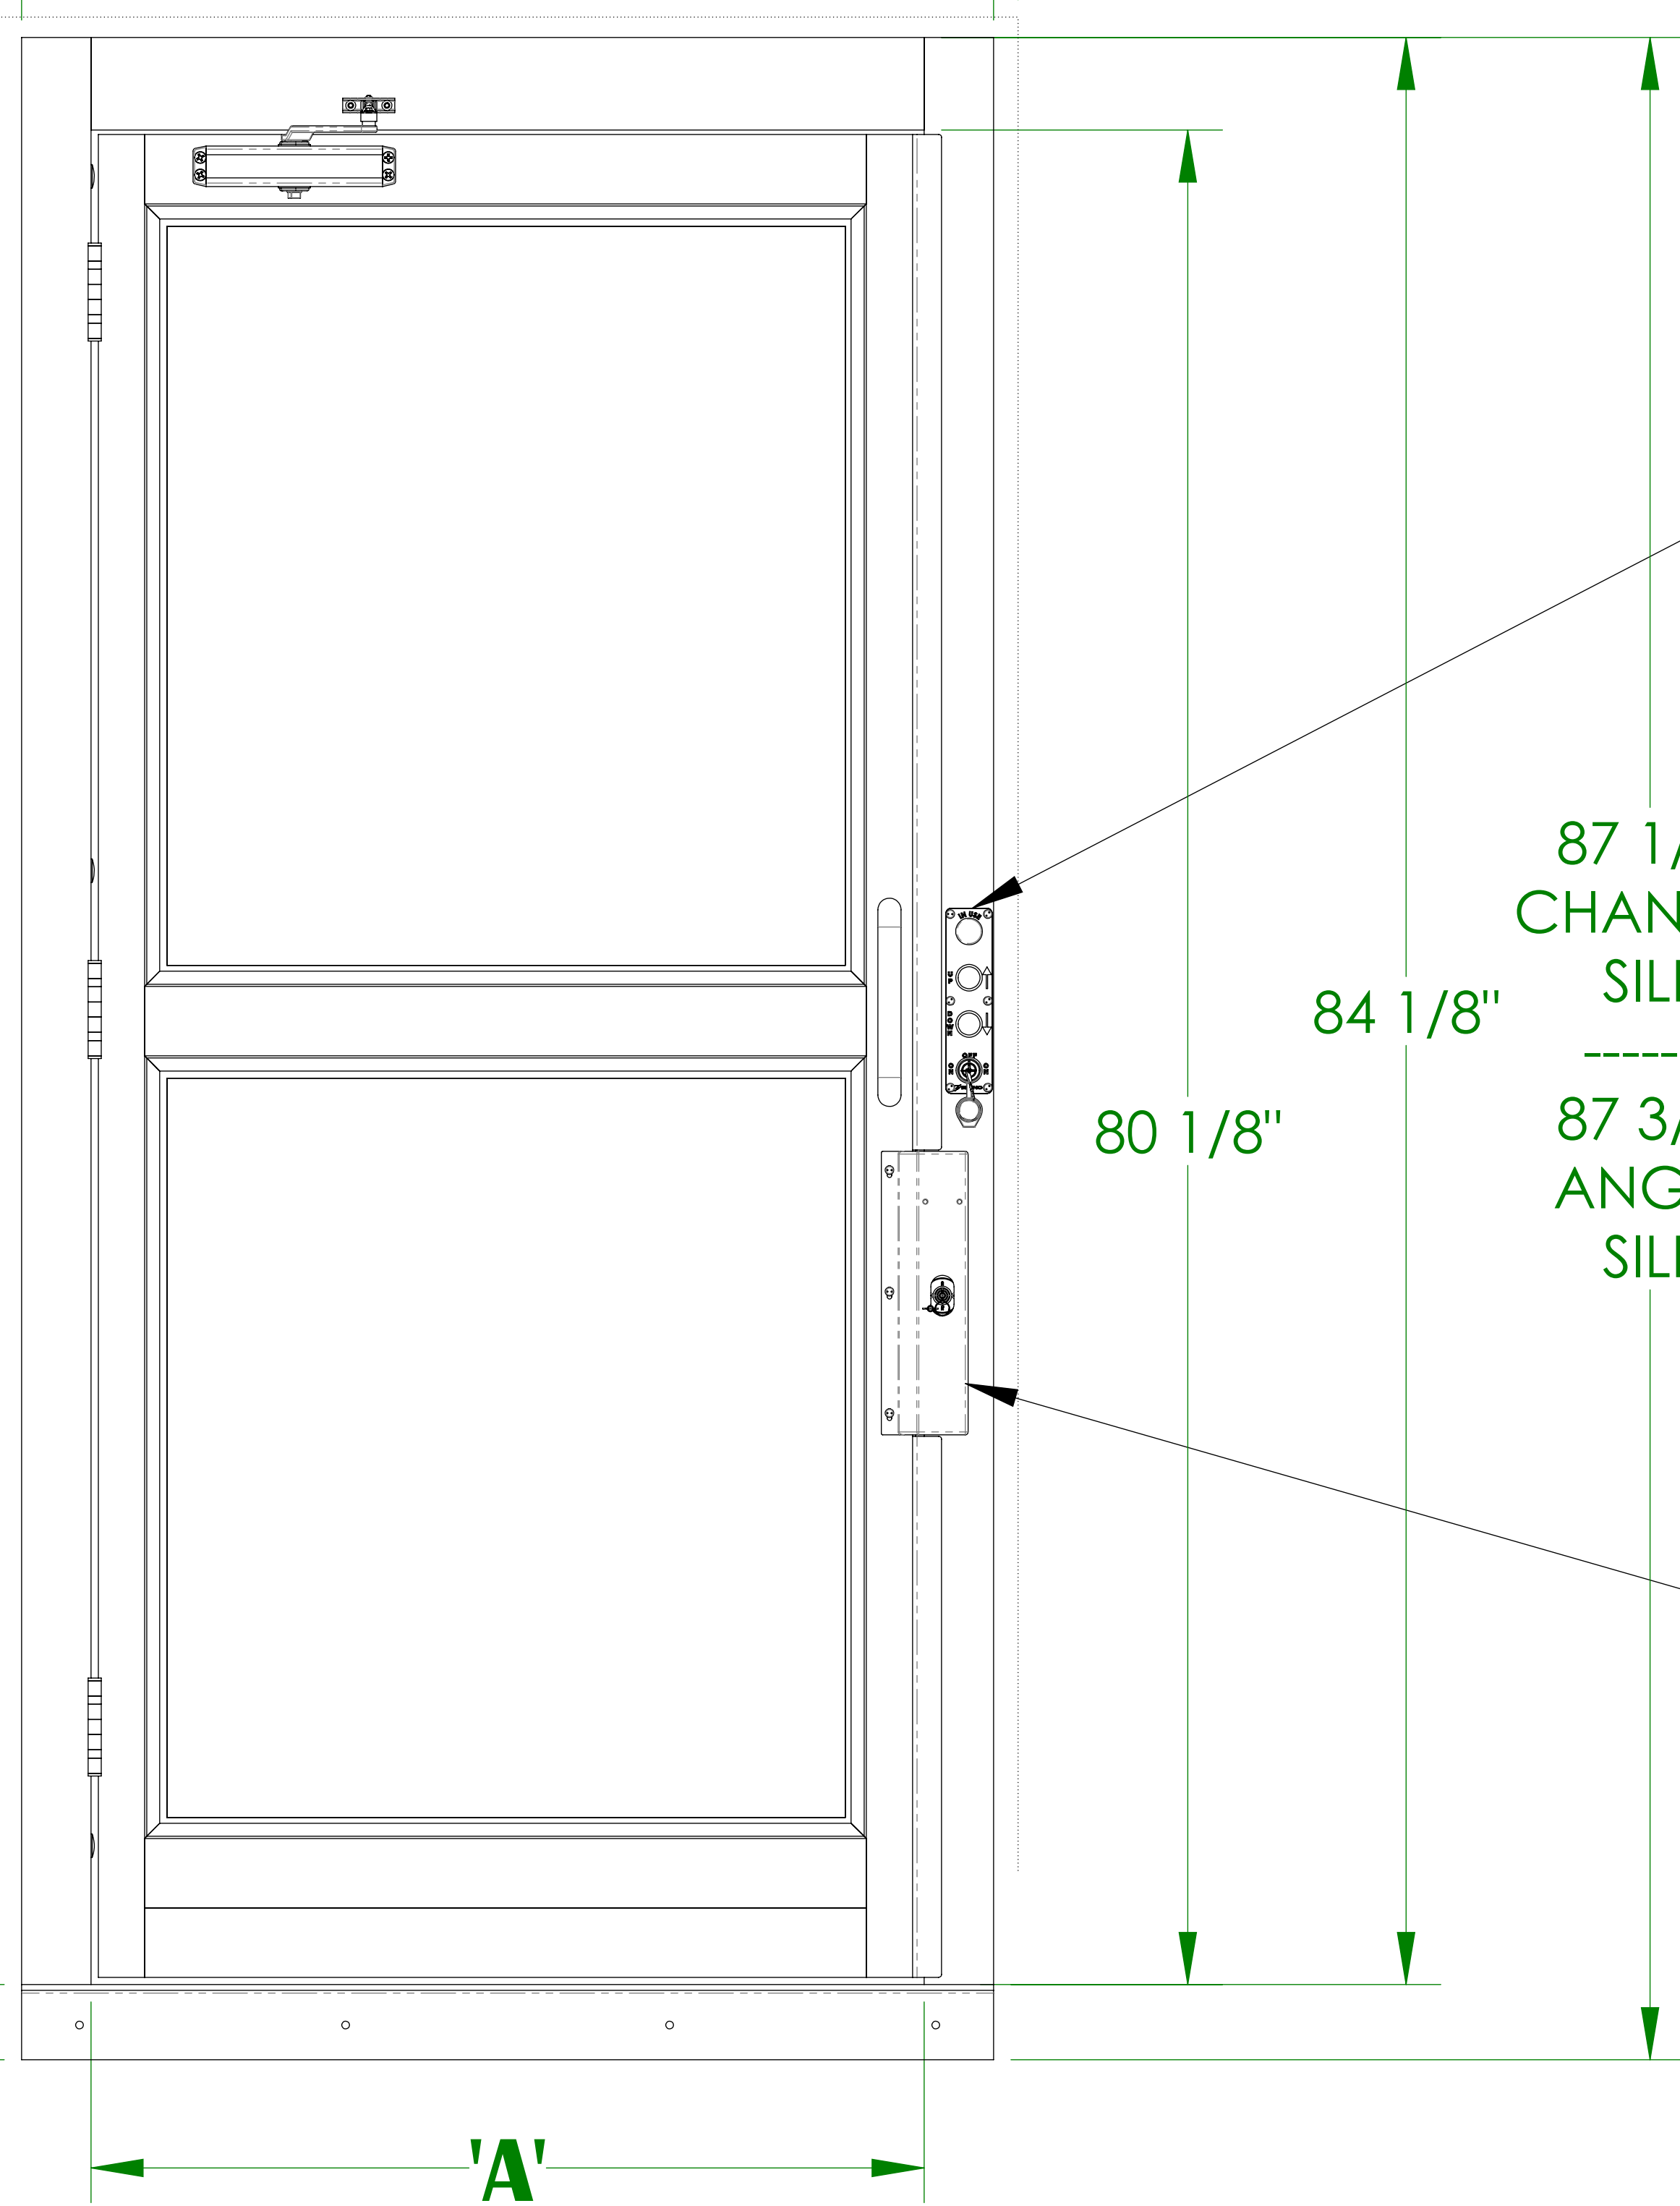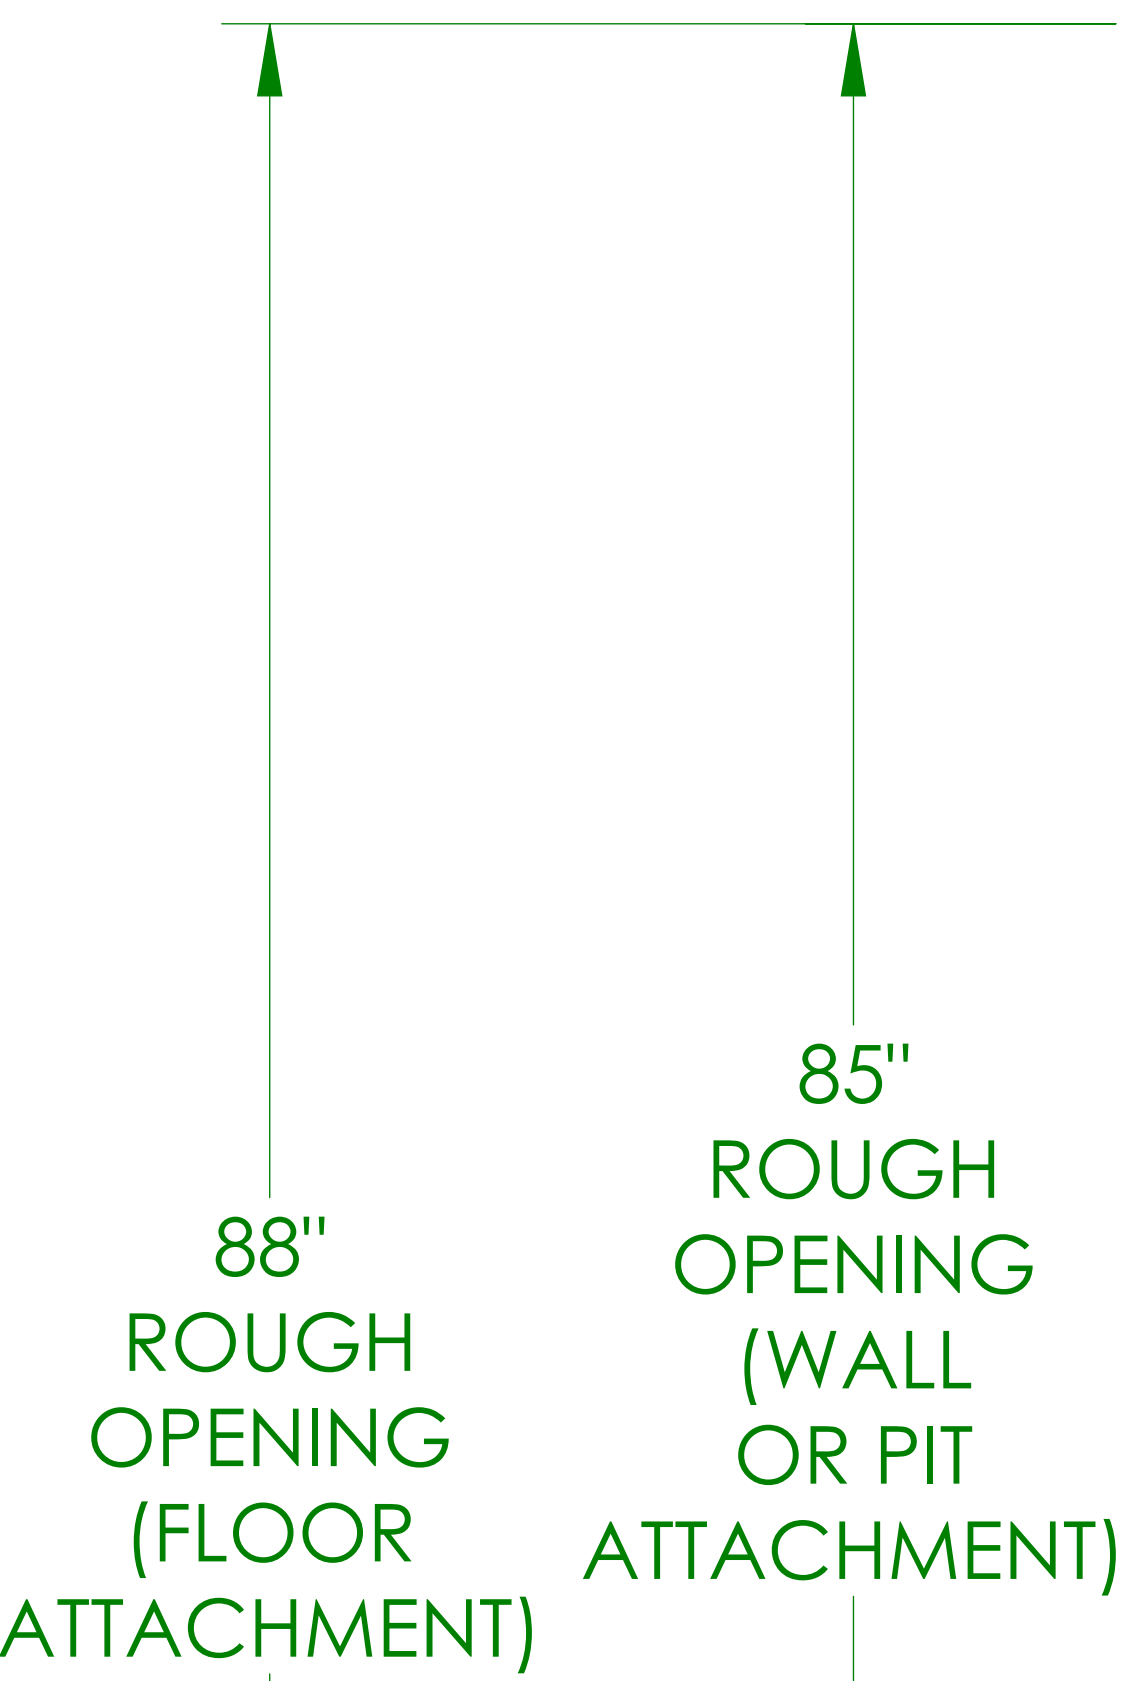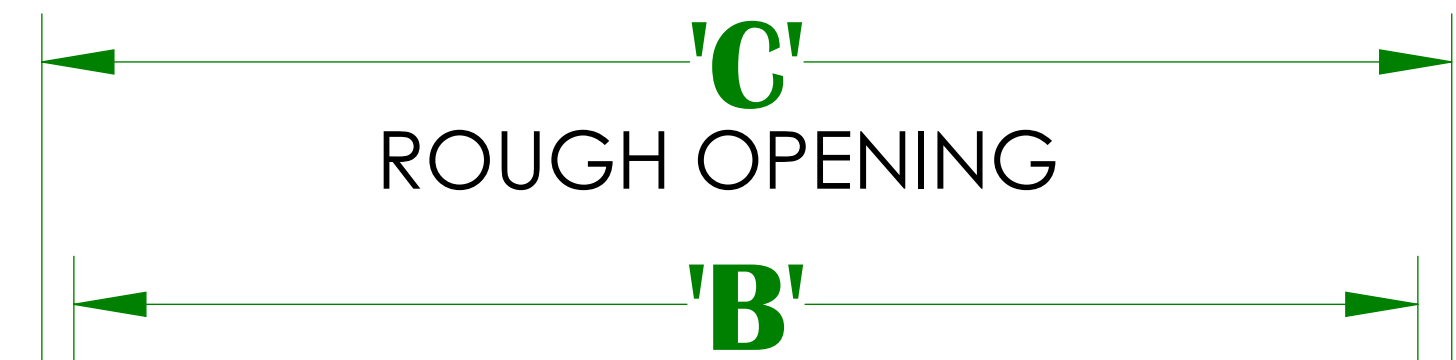


CALL/SEND CONTROL (OPTIONAL)

87 1/8" CHANNEL SILL


87 3/8" ANGLE SILL

ELECTRIC STRIKE INTERLOCK (ESI)

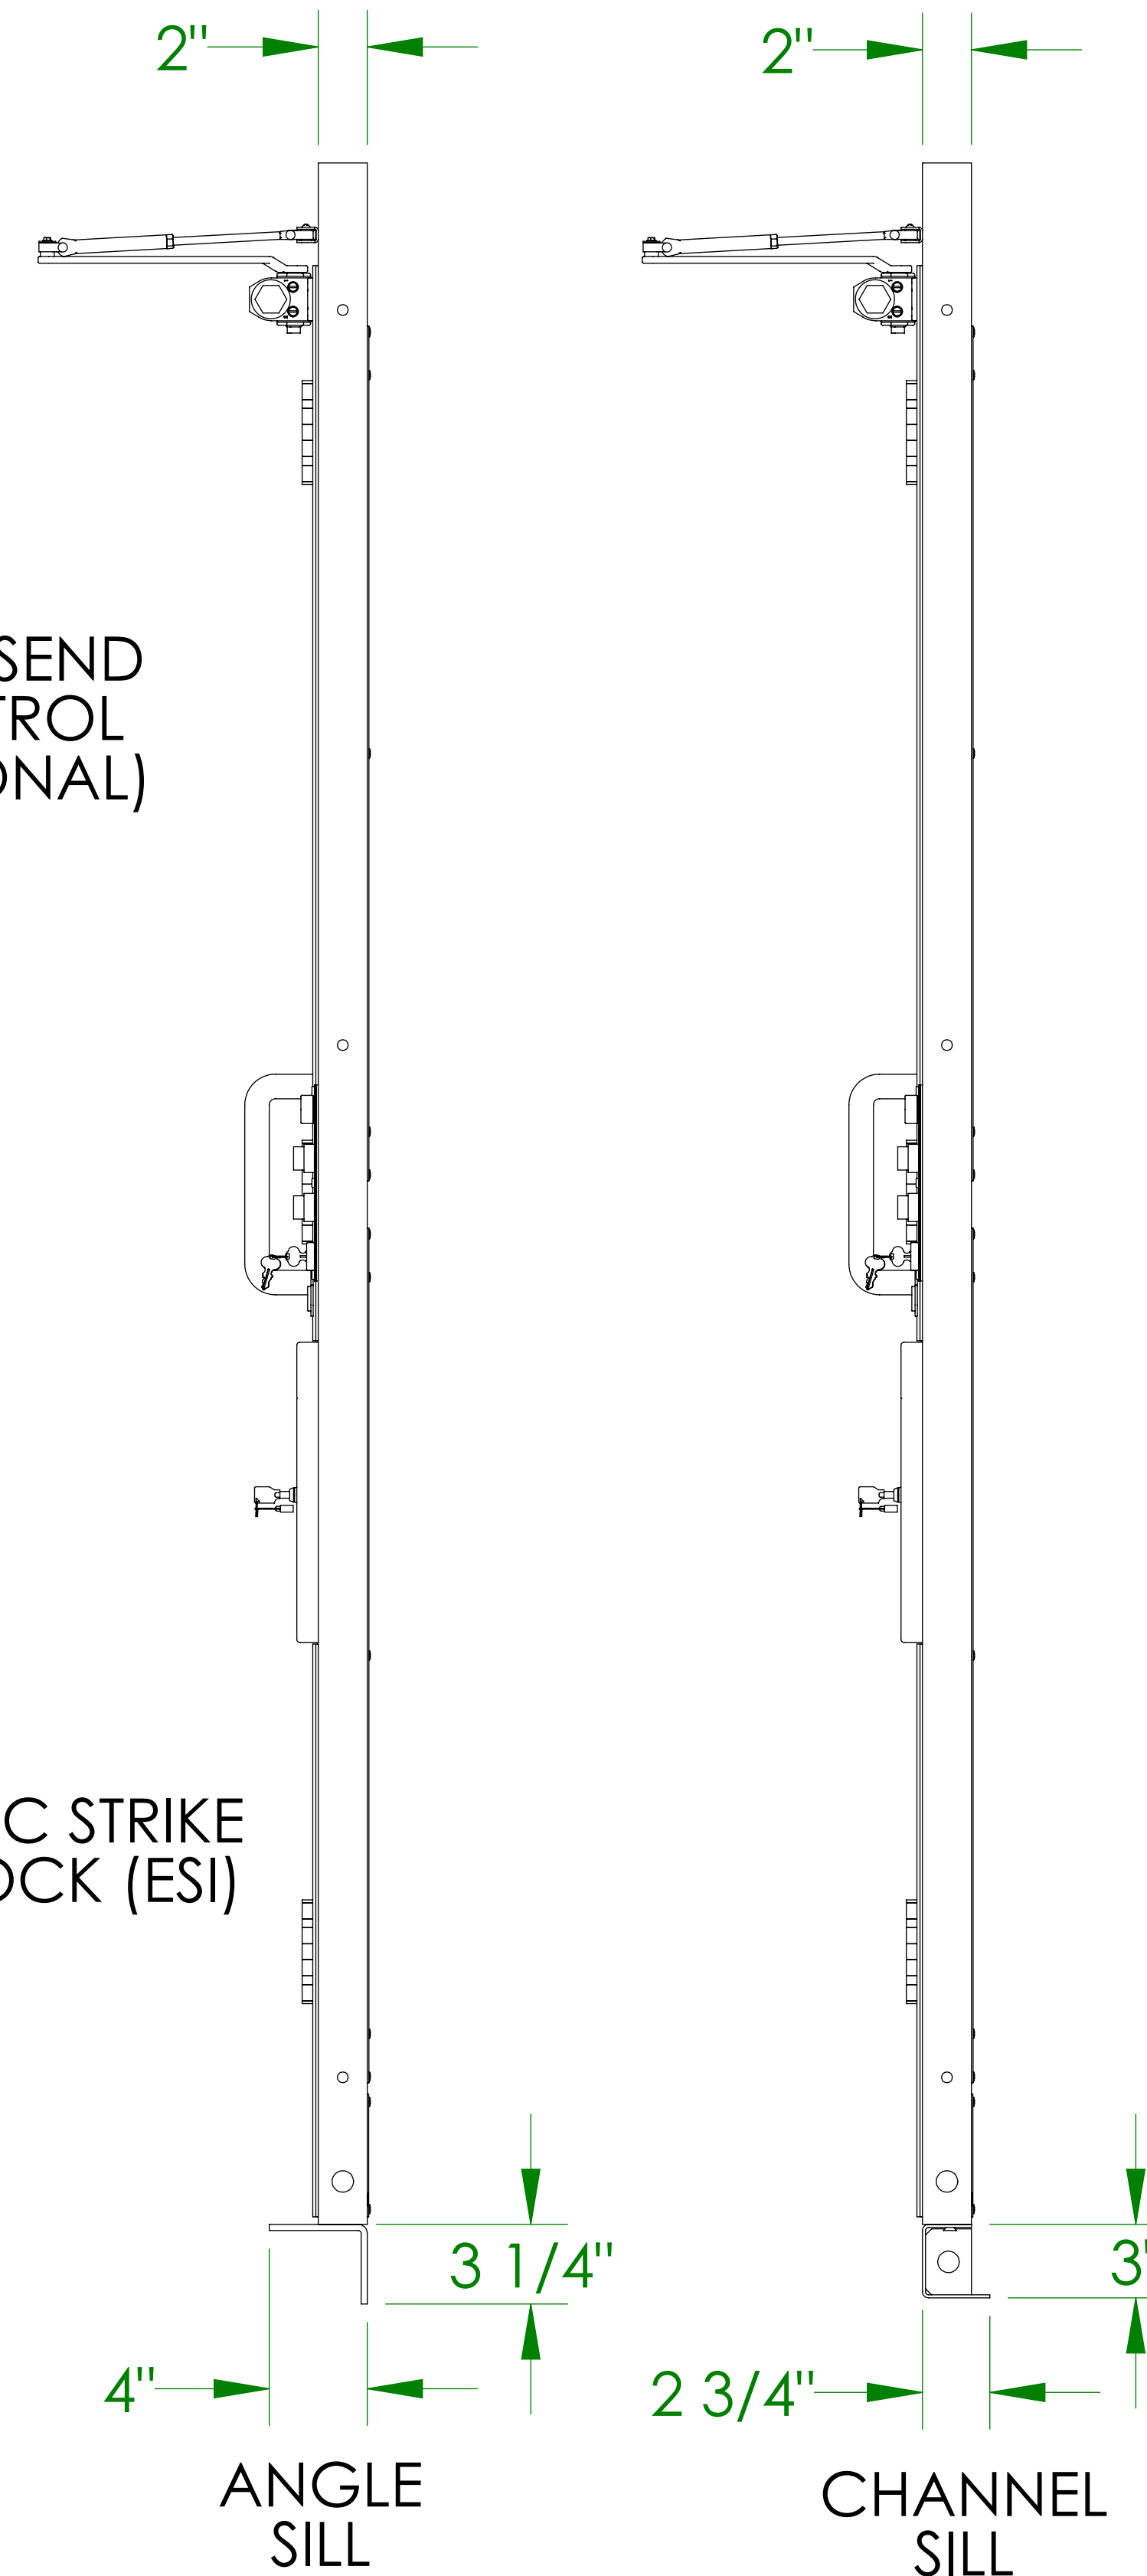

ANGLE SILL

CHANNEL SILL

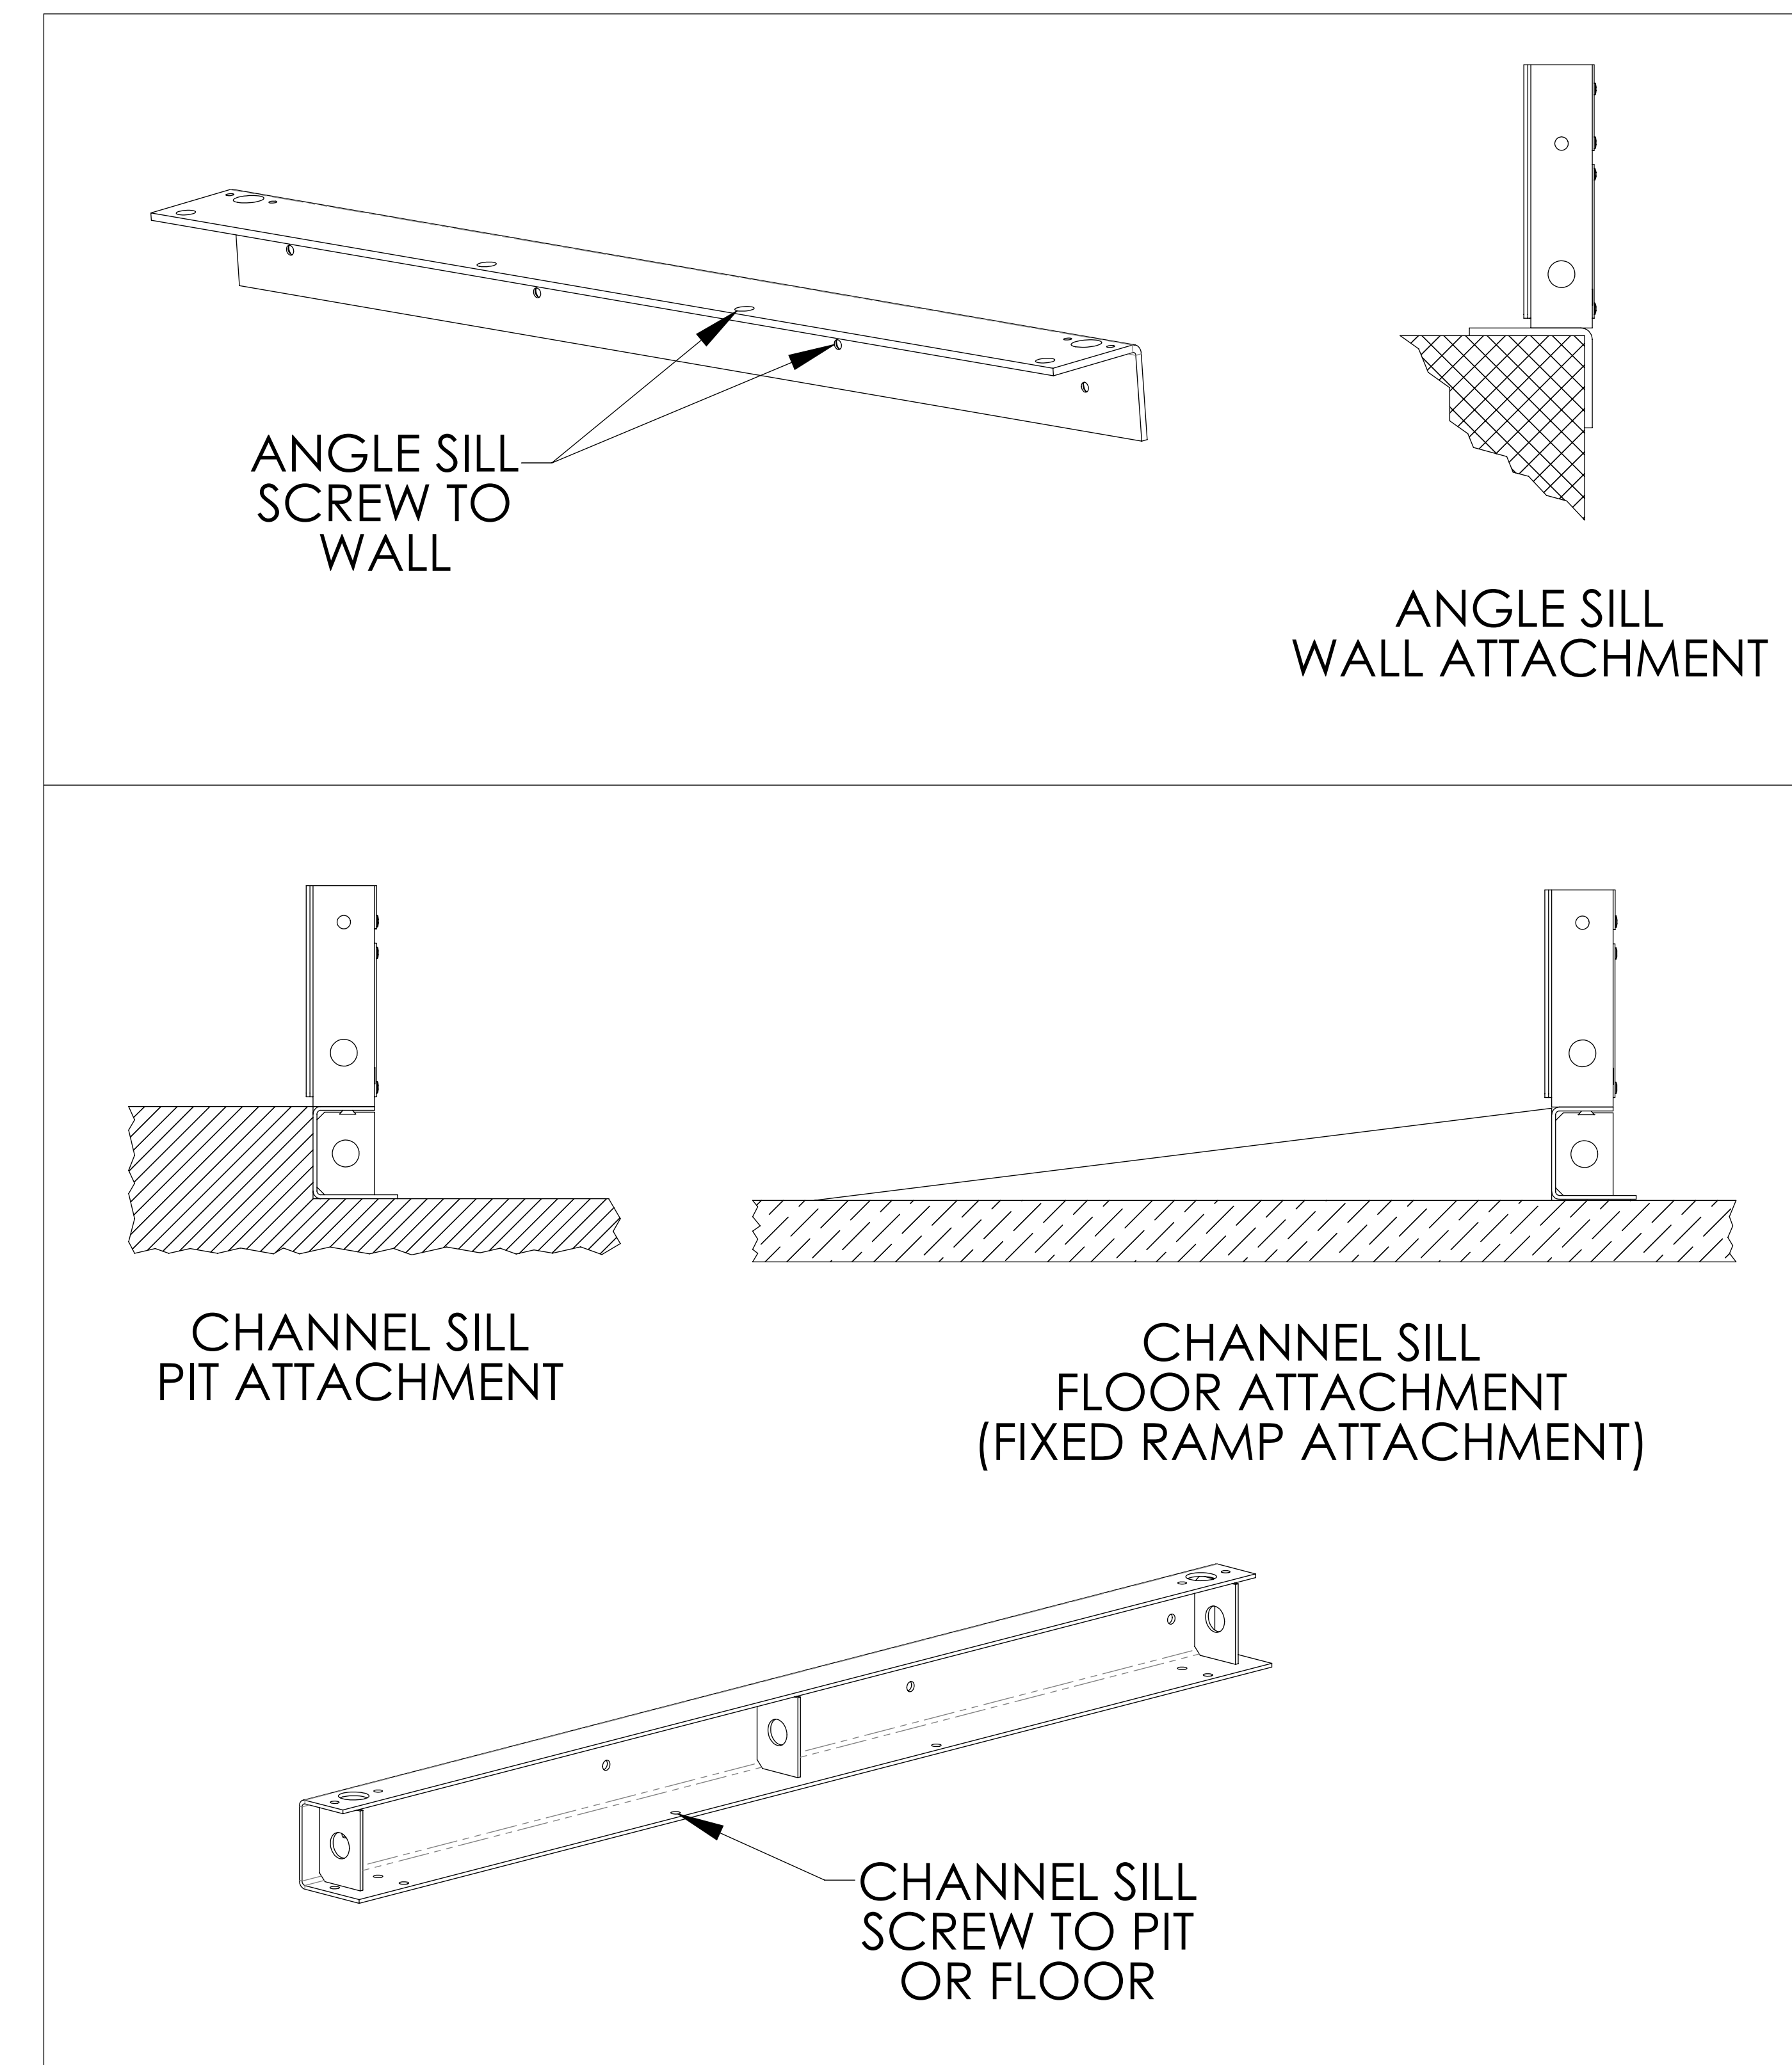

ANGLE SILL SCREW TO WALL


ANGLE SILL WALL ATTACHMENT

CHANNEL SILL PIT ATTACHMENT

CHANNEL SILL FLOOR ATTACHMENT (FIXED RAMP ATTACHMENT)

CHANNEL SILL SCREW TO PIT OR FLOOR


FLUSH MOUNT ALUMINUM DOOR ALIGNMENT (STRAIGHT-THRU PLATFORM) BRUNO VERTICAL PLATFORM LIFT

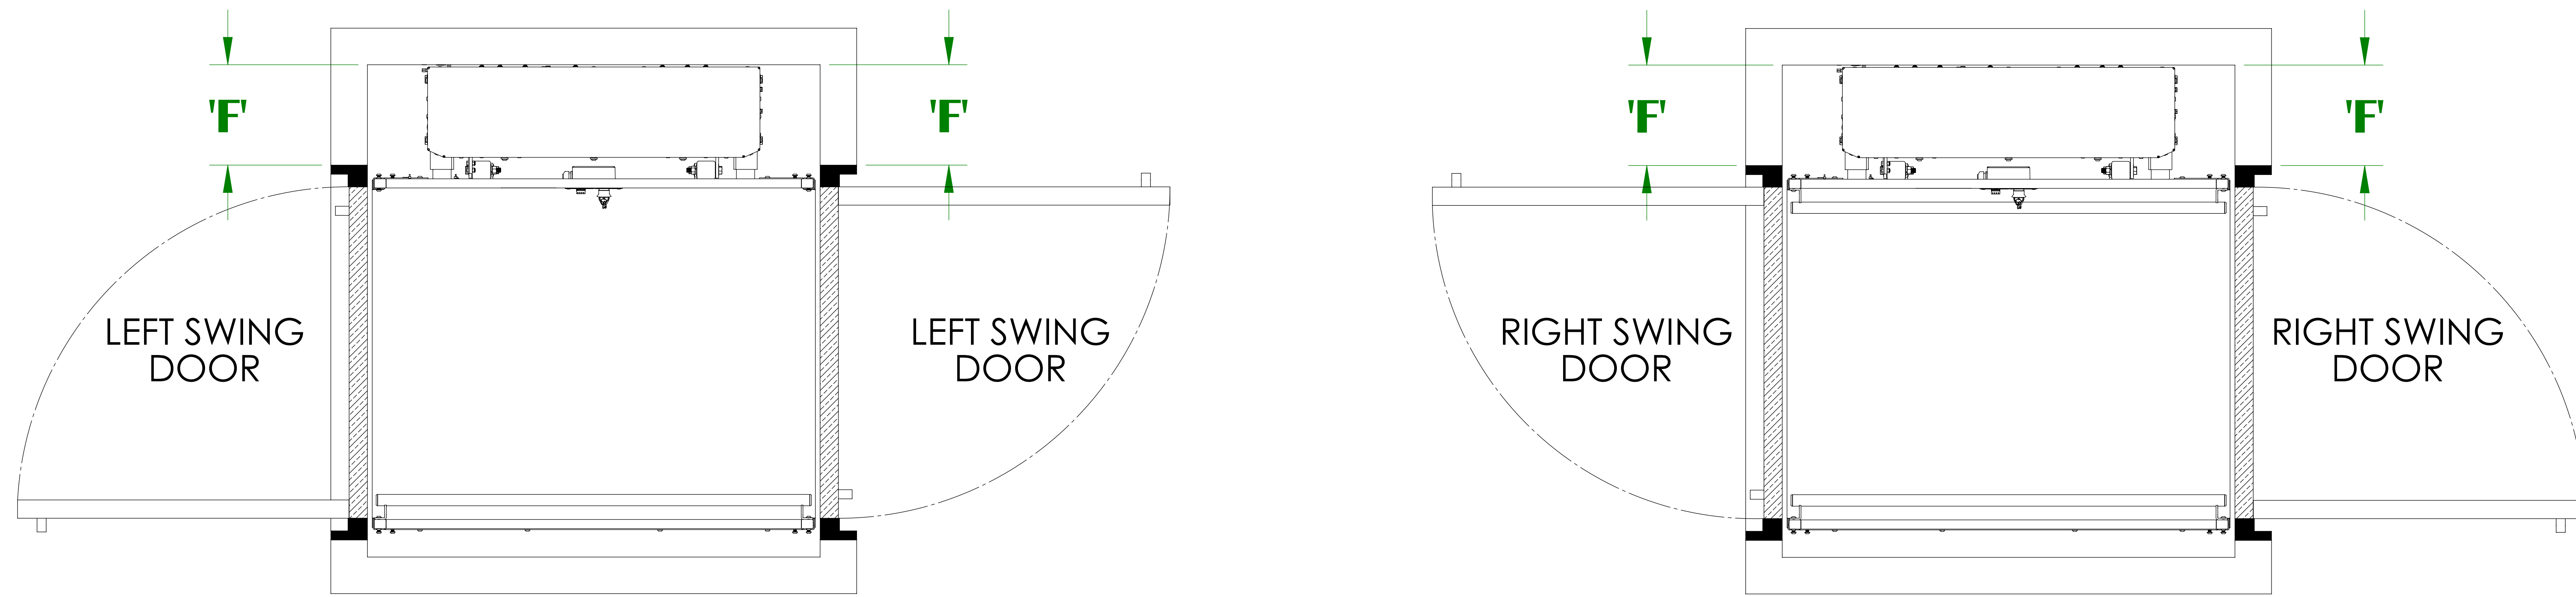


PLAN VIEWS

DOOR SIZE	DOOR LOCATION	DOOR SWING	LEFT HAND UNIT 'F'	RIGHT HAND UNIT 'F'
36"	LOWER LANDING	LEFT SWING DOOR	11-5/8"	9-1/8"
36"	LOWER LANDING	RIGHT SWING DOOR	9-1/8"	11-5/8"
36"	UPPER LANDING	LEFT SWING DOOR	9-1/8"	11-5/8"
36"	UPPER LANDING	RIGHT SWING DOOR	11-5/8"	9-1/8"
45"	LOWER LANDING	LEFT SWING DOOR	10-1/8"	7-5/8"
45"	LOWER LANDING	RIGHT SWING DOOR	7-5/8"	10-1/8"
45"	UPPER LANDING	LEFT SWING DOOR	7-5/8"	10-1/8"
45"	UPPER LANDING	RIGHT SWING DOOR	10-1/8"	7-5/8"

FLUSH MOUNT ALUMINUM DOOR ALIGNMENT (90° / ADJACENT EXIT PLATFORM) BRUNO VERTICAL PLATFORM LIFT


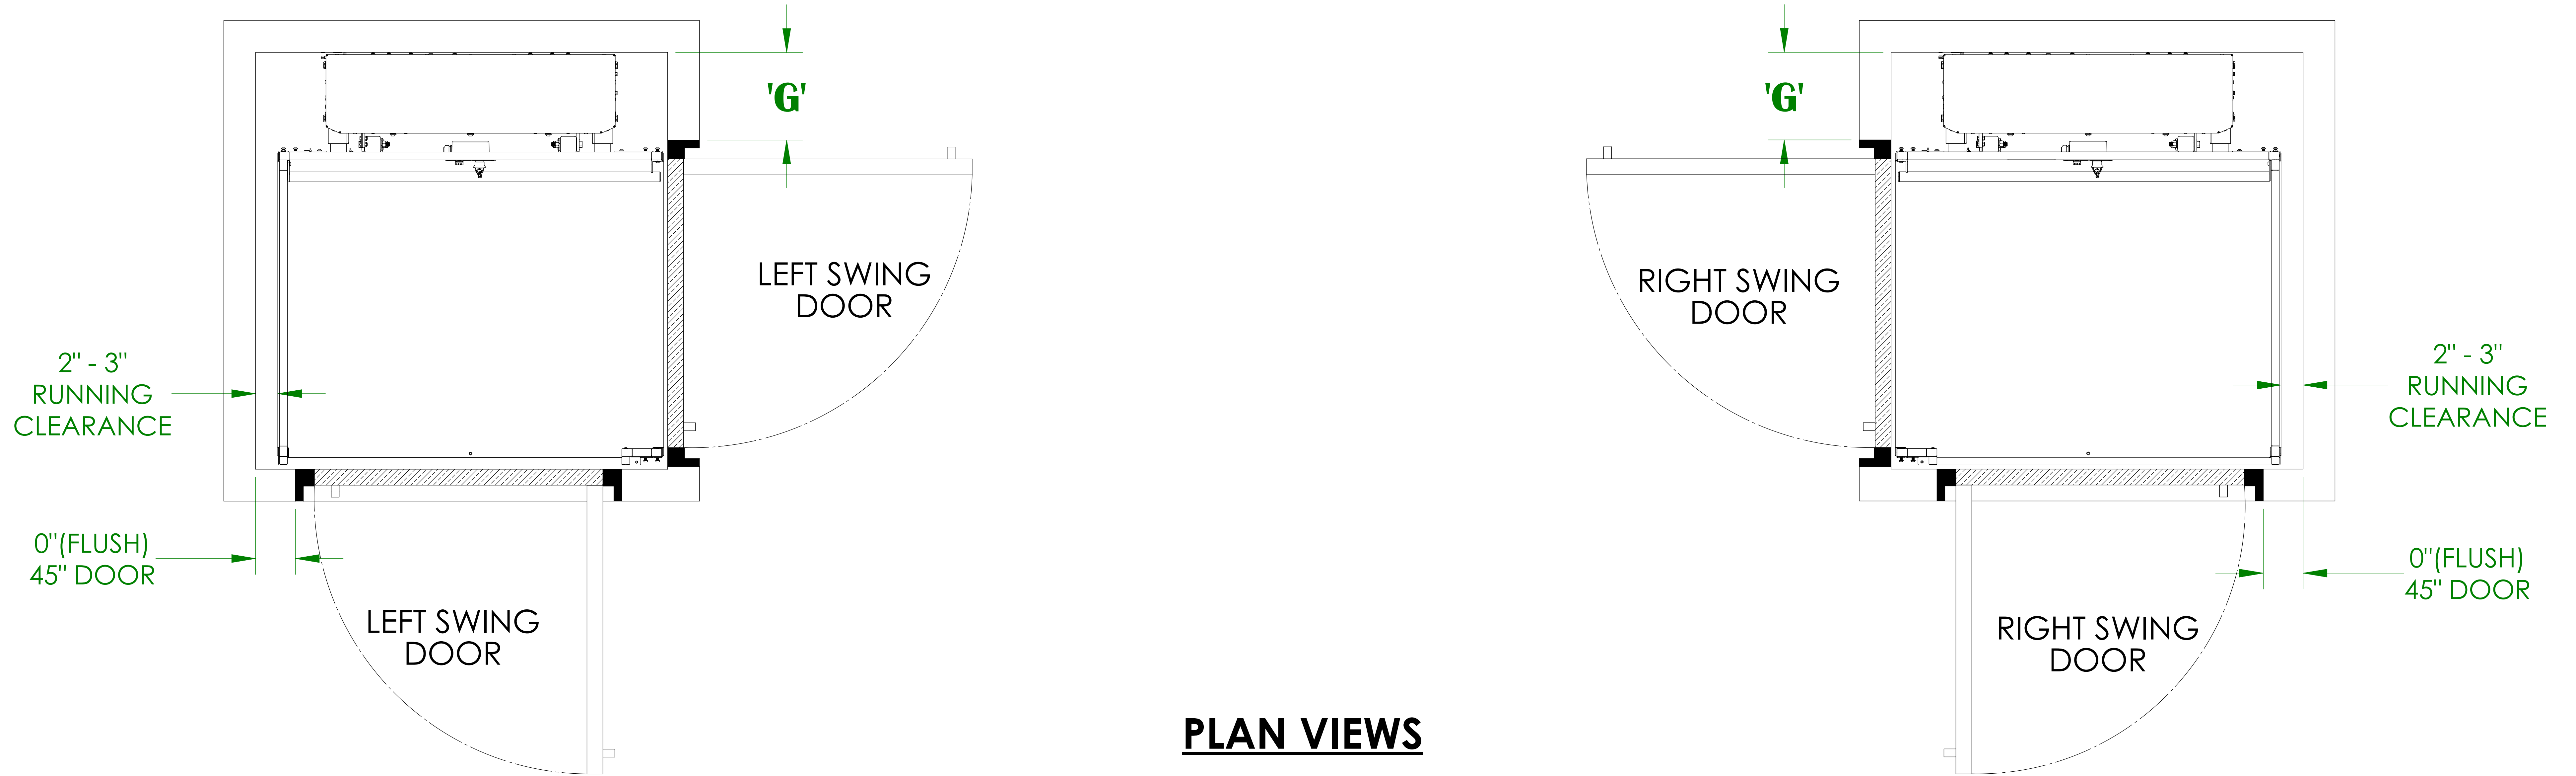


PLAN VIEWS


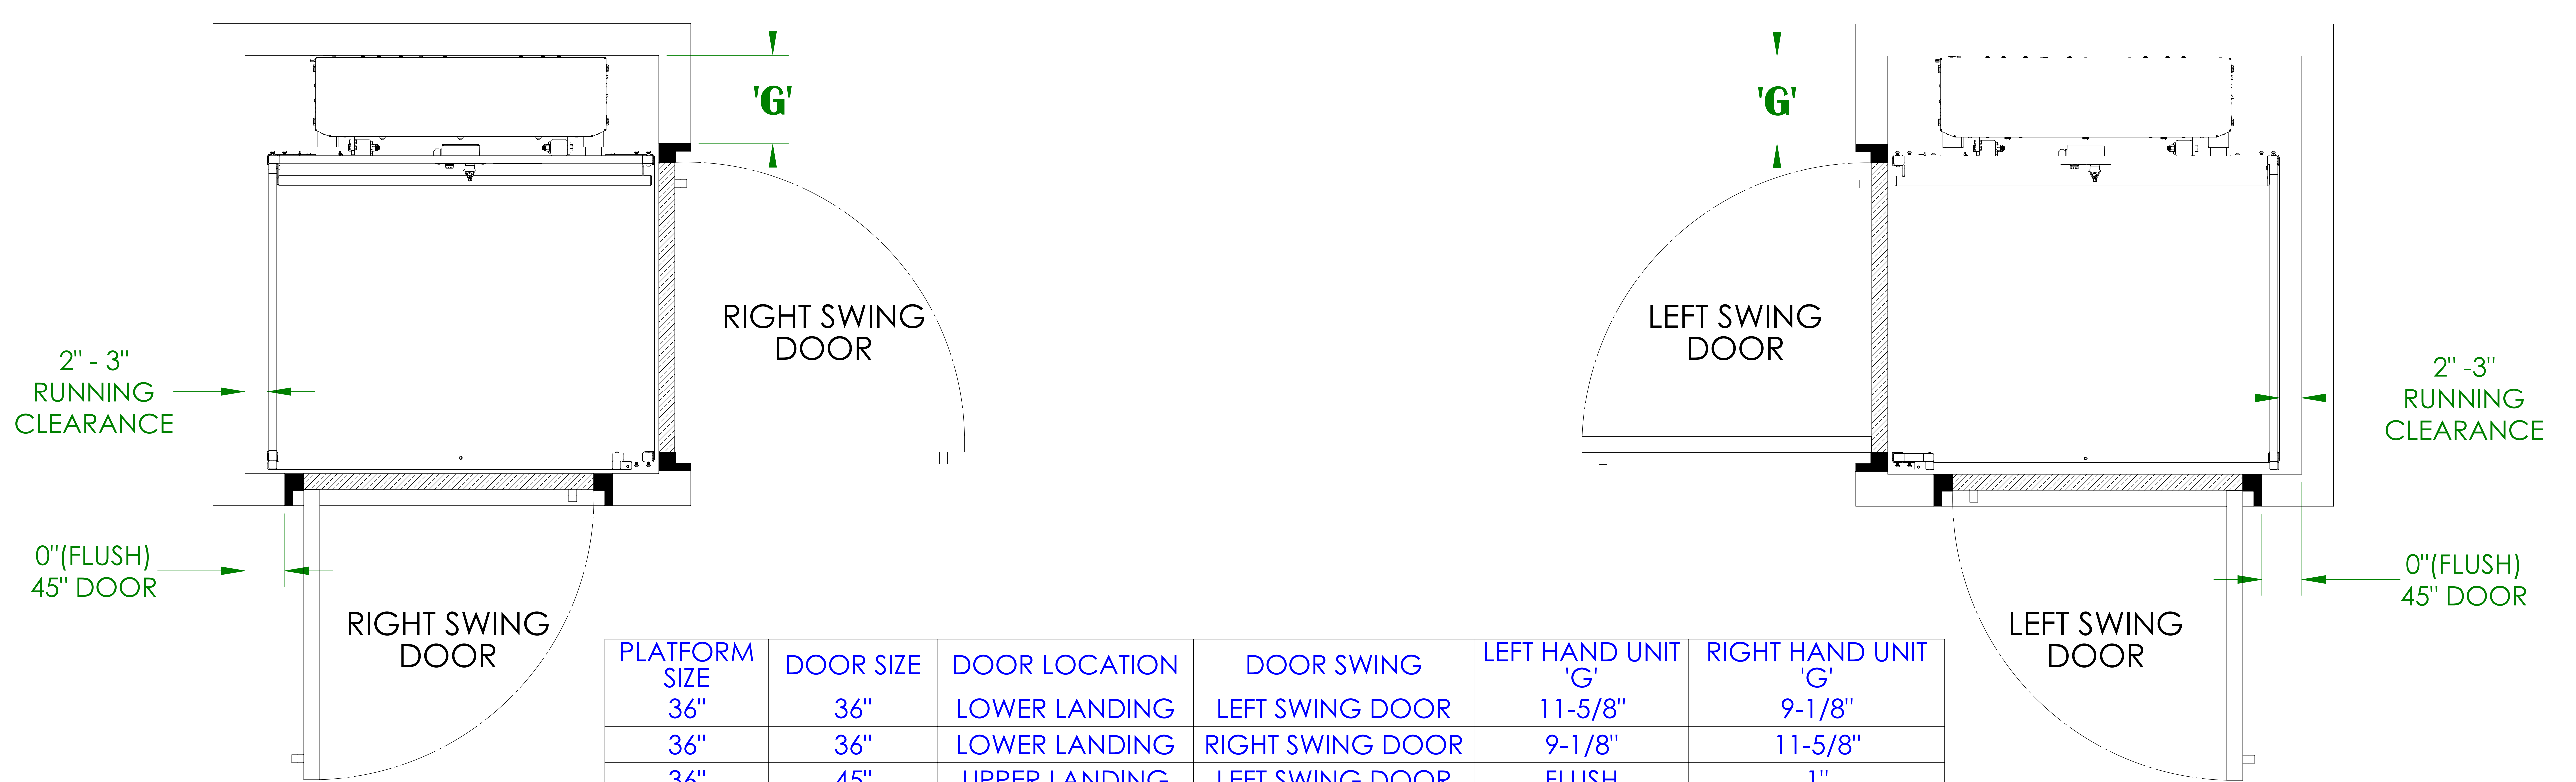


PLATFORM SIZE	DOOR SIZE	DOOR LOCATION	DOOR SWING	LEFT HAND UNIT 'G'	RIGHT HAND UNIT 'G'
36"	36"	LOWER LANDING	LEFT SWING DOOR	11-5/8"	9-1/8"
36"	36"	LOWER LANDING	RIGHT SWING DOOR	9-1/8"	11-5/8"
36"	45"	UPPER LANDING	LEFT SWING DOOR	FLUSH	1"
36"	45"	UPPER LANDING	RIGHT SWING DOOR	1"	FLUSH
42"	45"	LOWER LANDING	LEFT SWING DOOR	10-1/8"	7-5/8"
42"	45"	LOWER LANDING	RIGHT SWING DOOR	7-5/8"	10-5/8"
42"	45"	UPPER LANDING	LEFT SWING DOOR	FLUSH	1"
42"	45"	UPPER LANDING	RIGHT SWING DOOR	1"	FLUSH

FLUSH MOUNT ALUMINUM DOOR ALIGNMENT (SAME SIDE PLATFORM) BRUNO VERTICAL PLATFORM LIFT

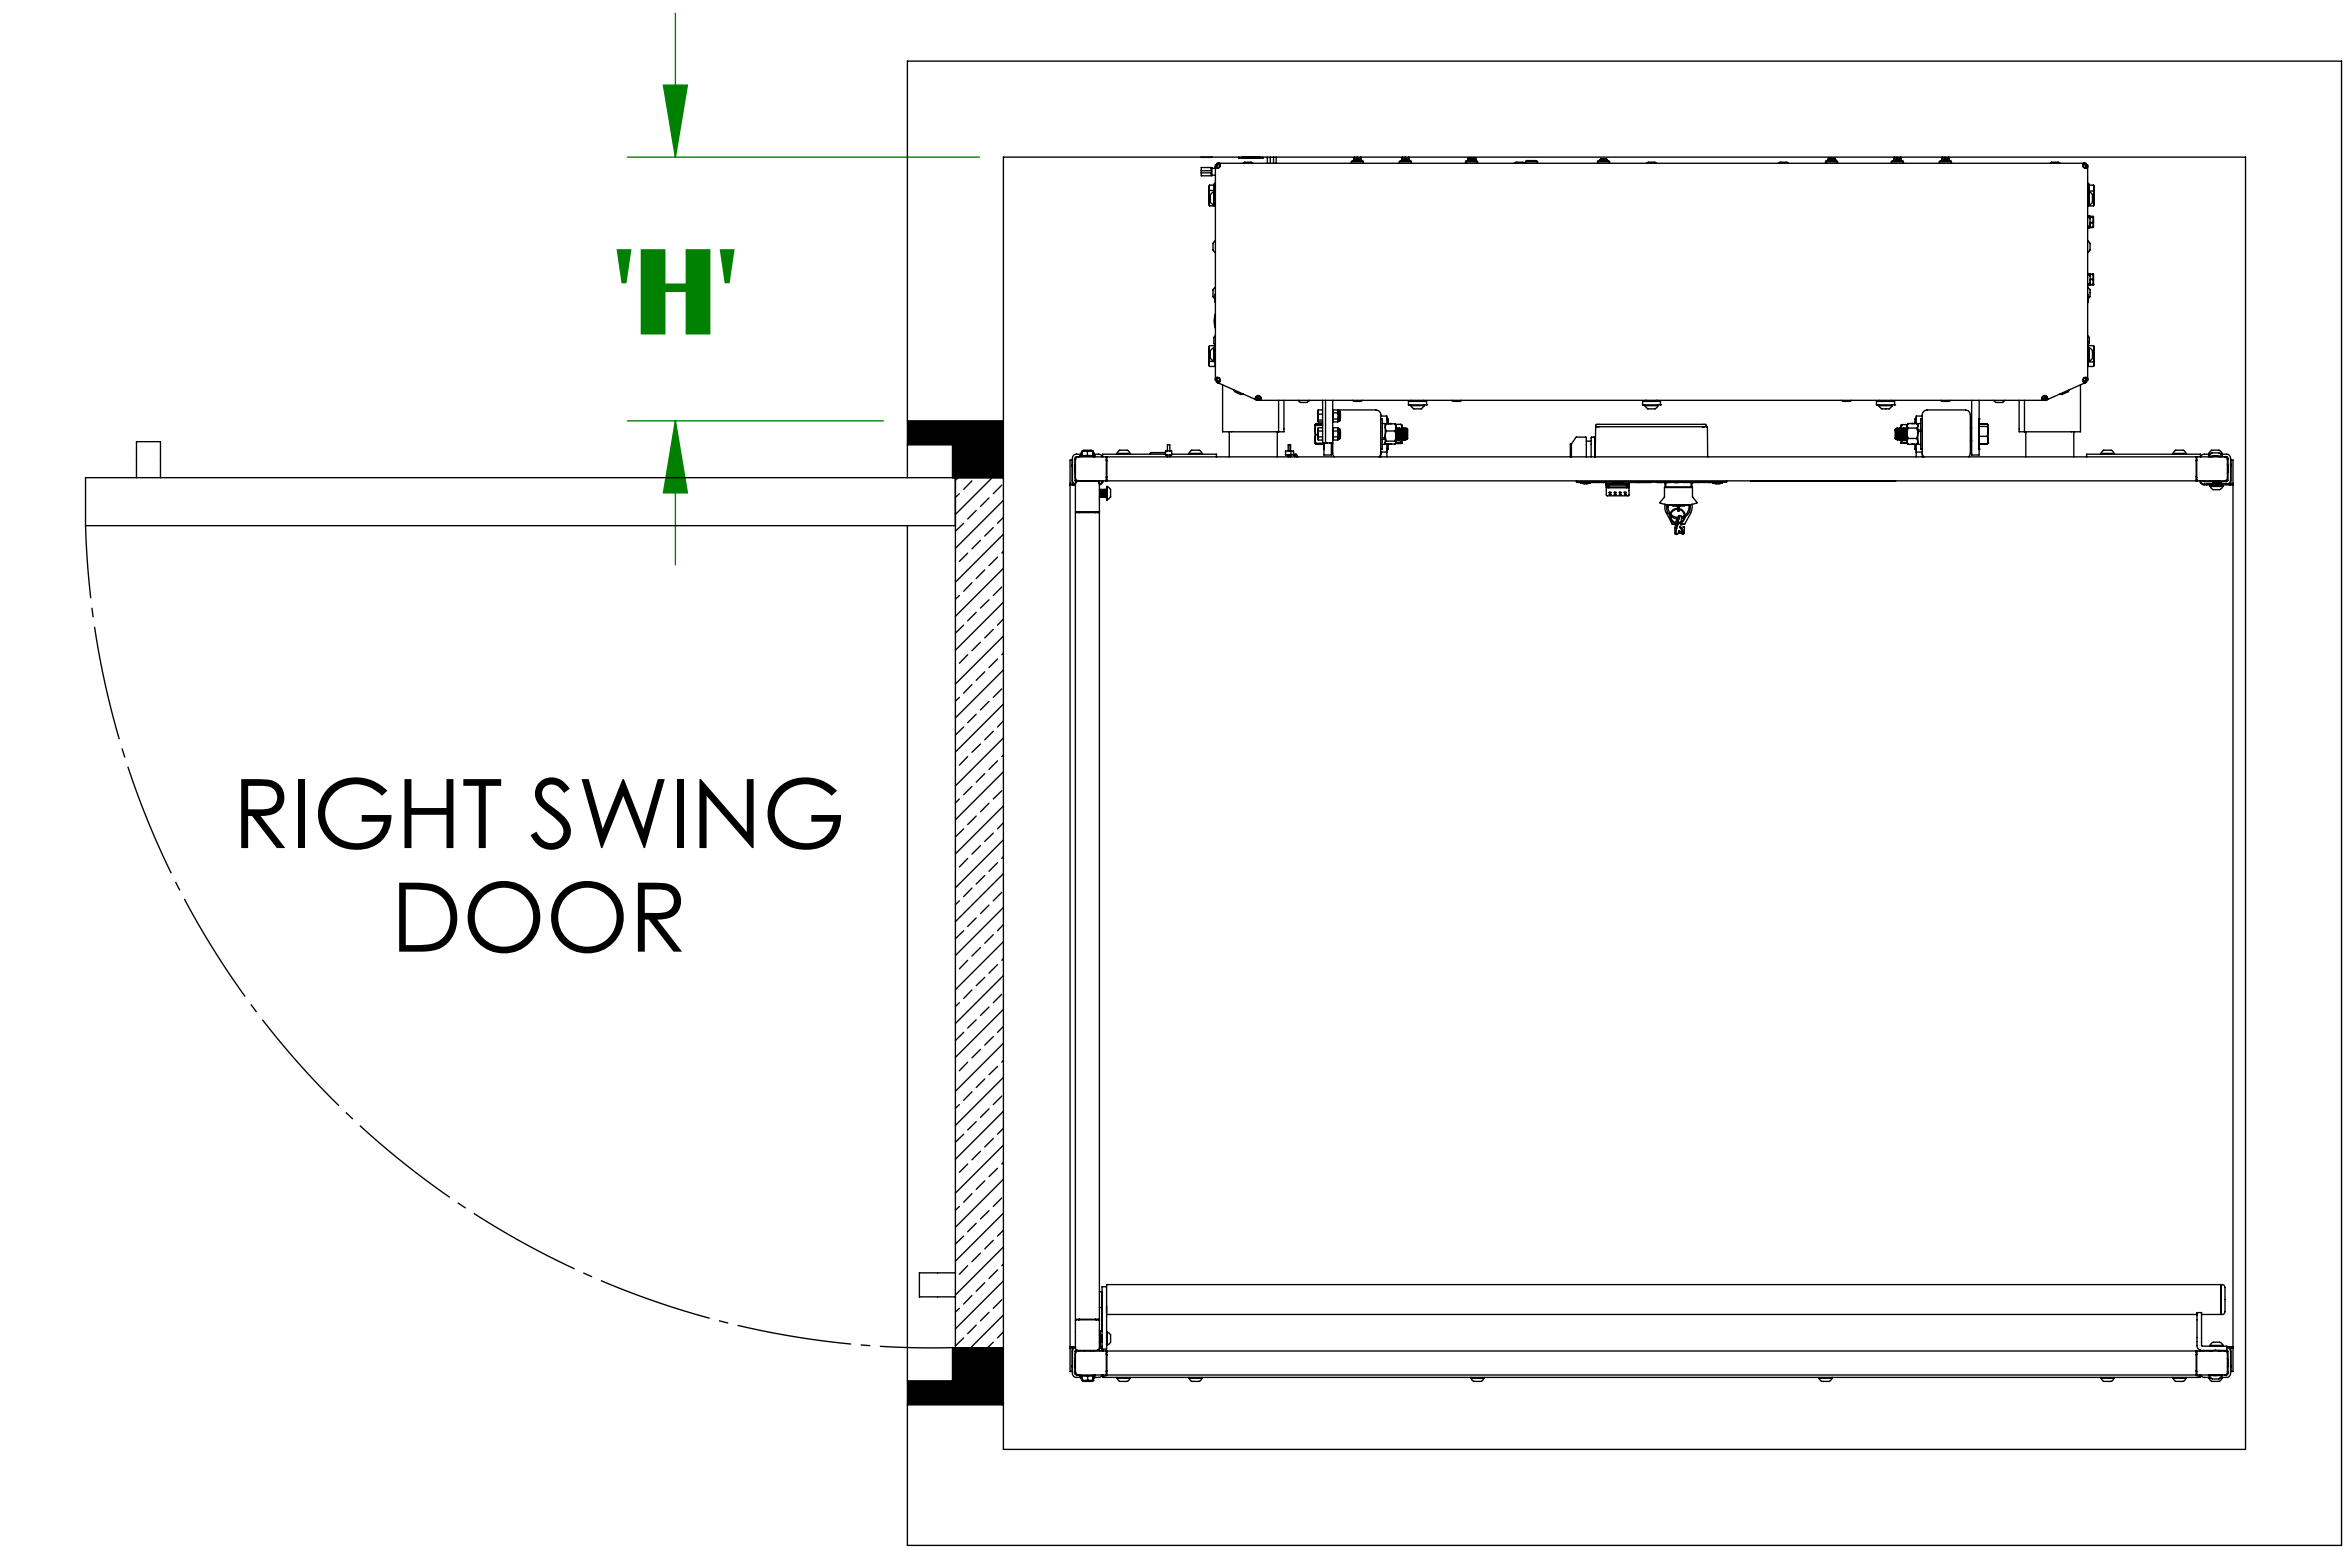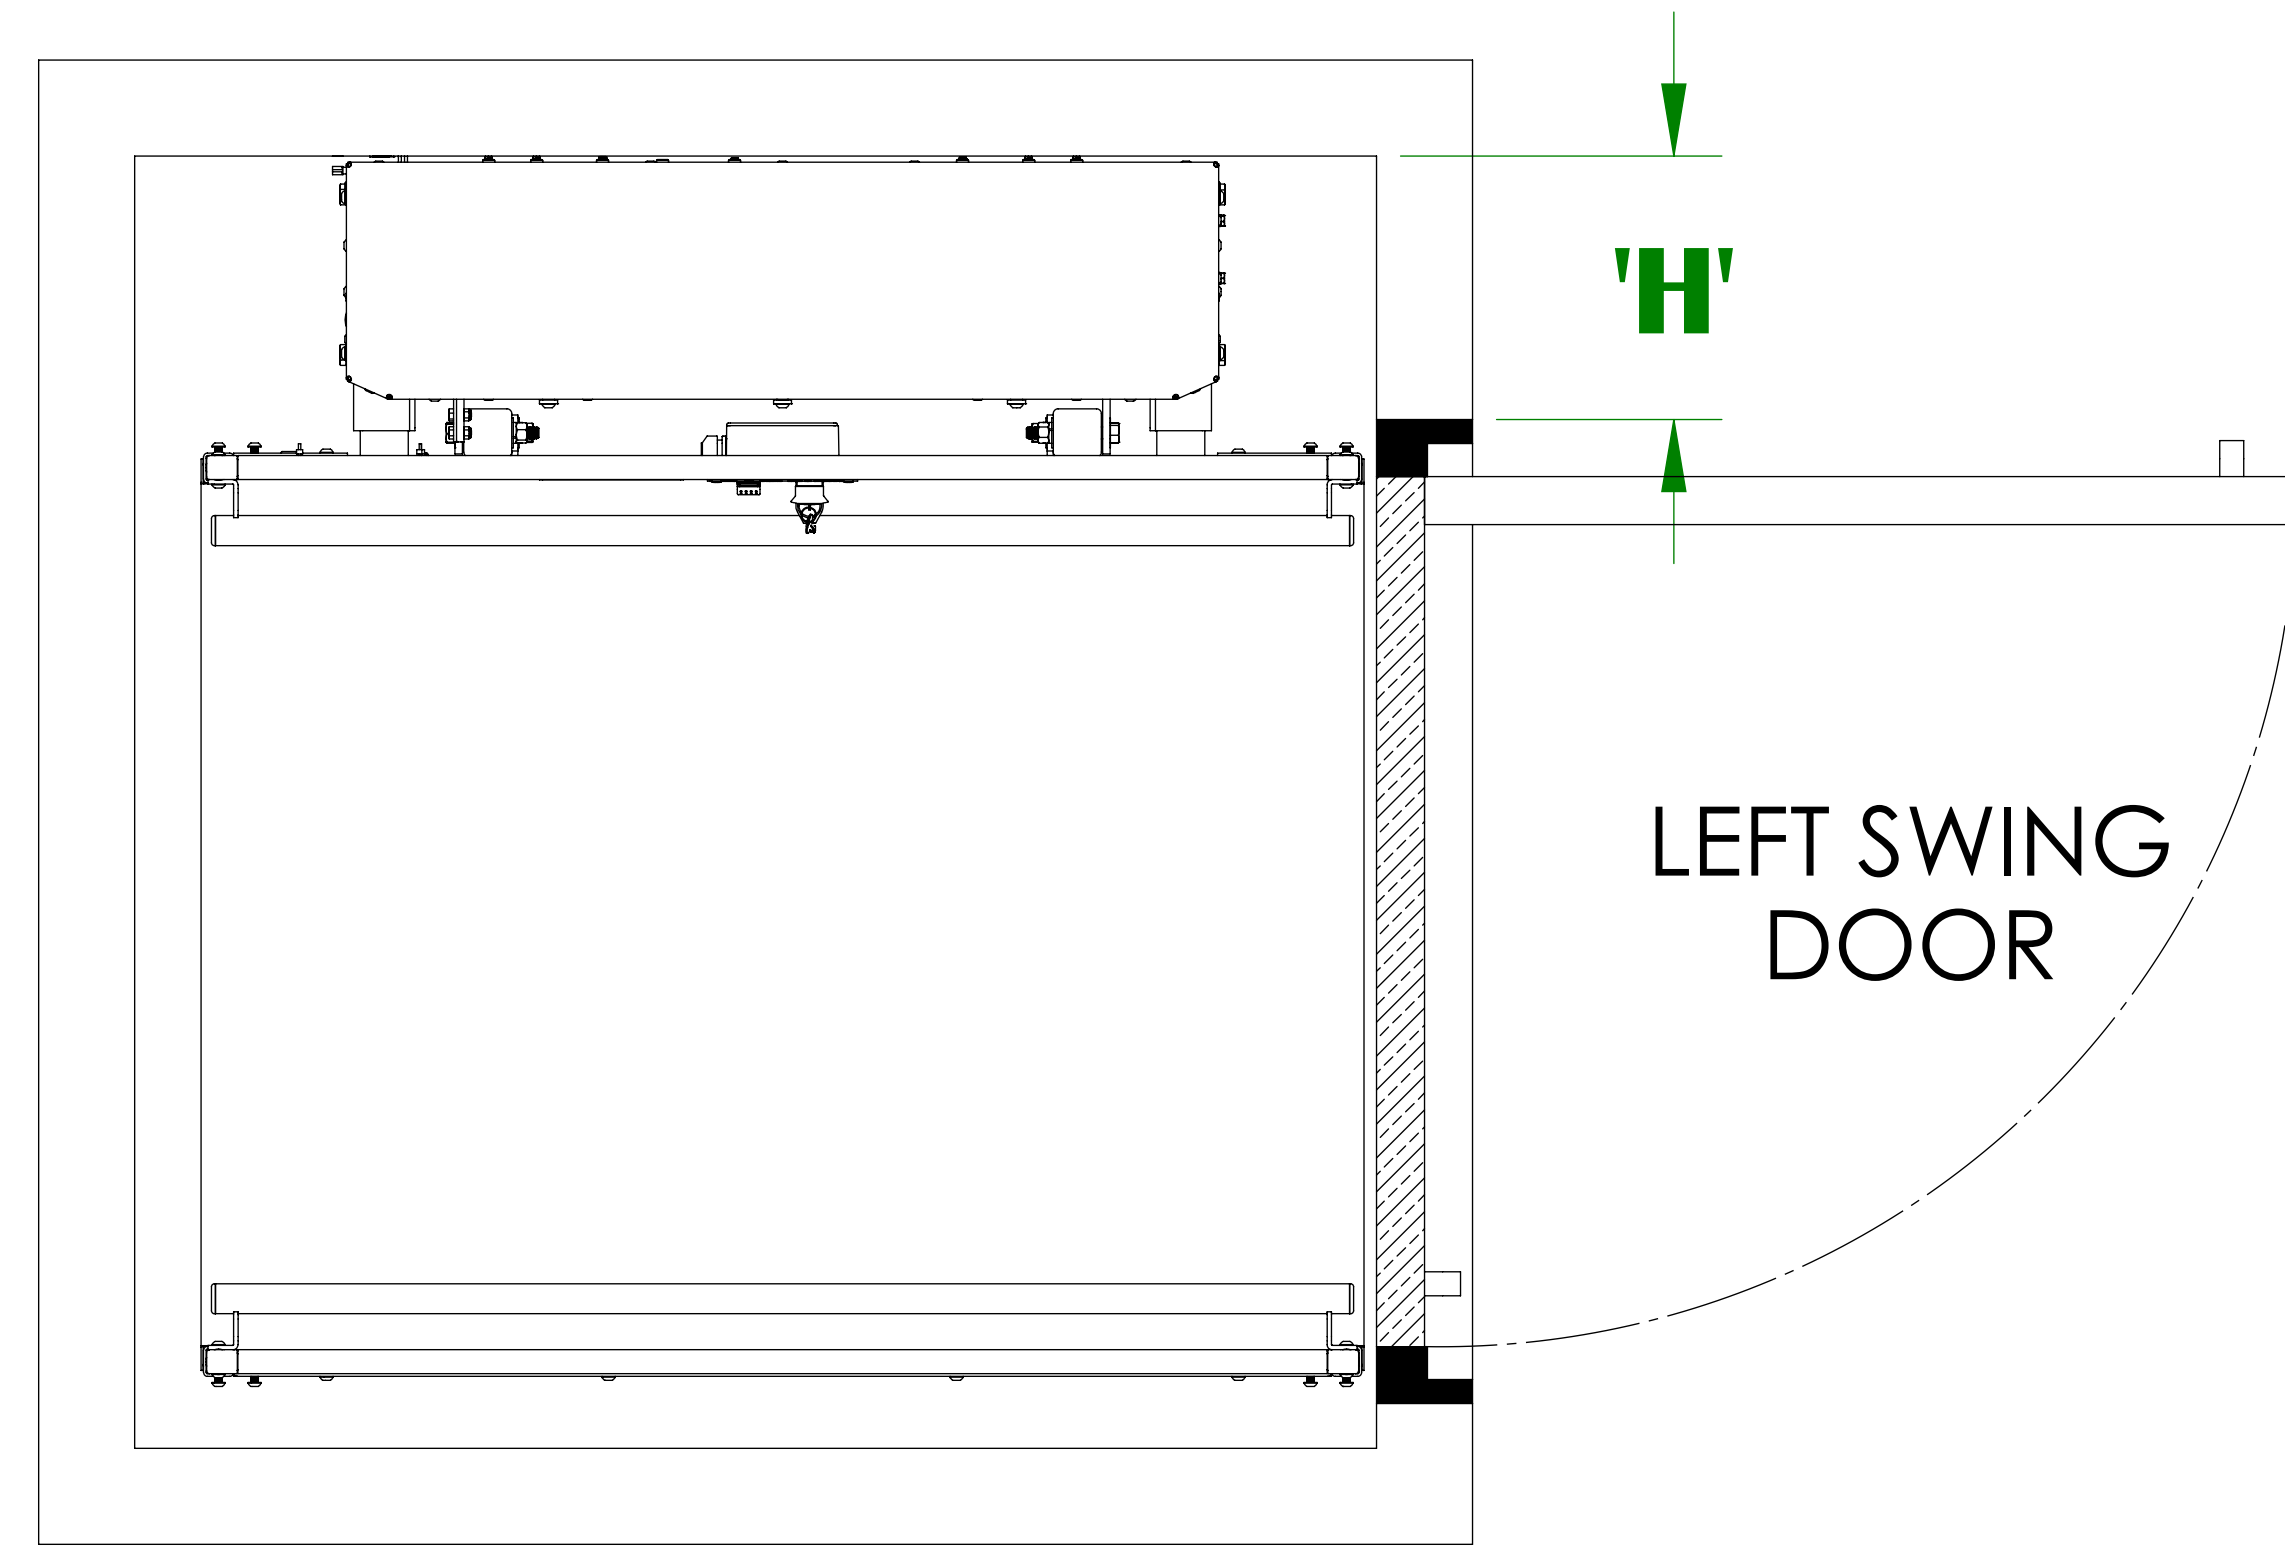

PLAN VIEWS

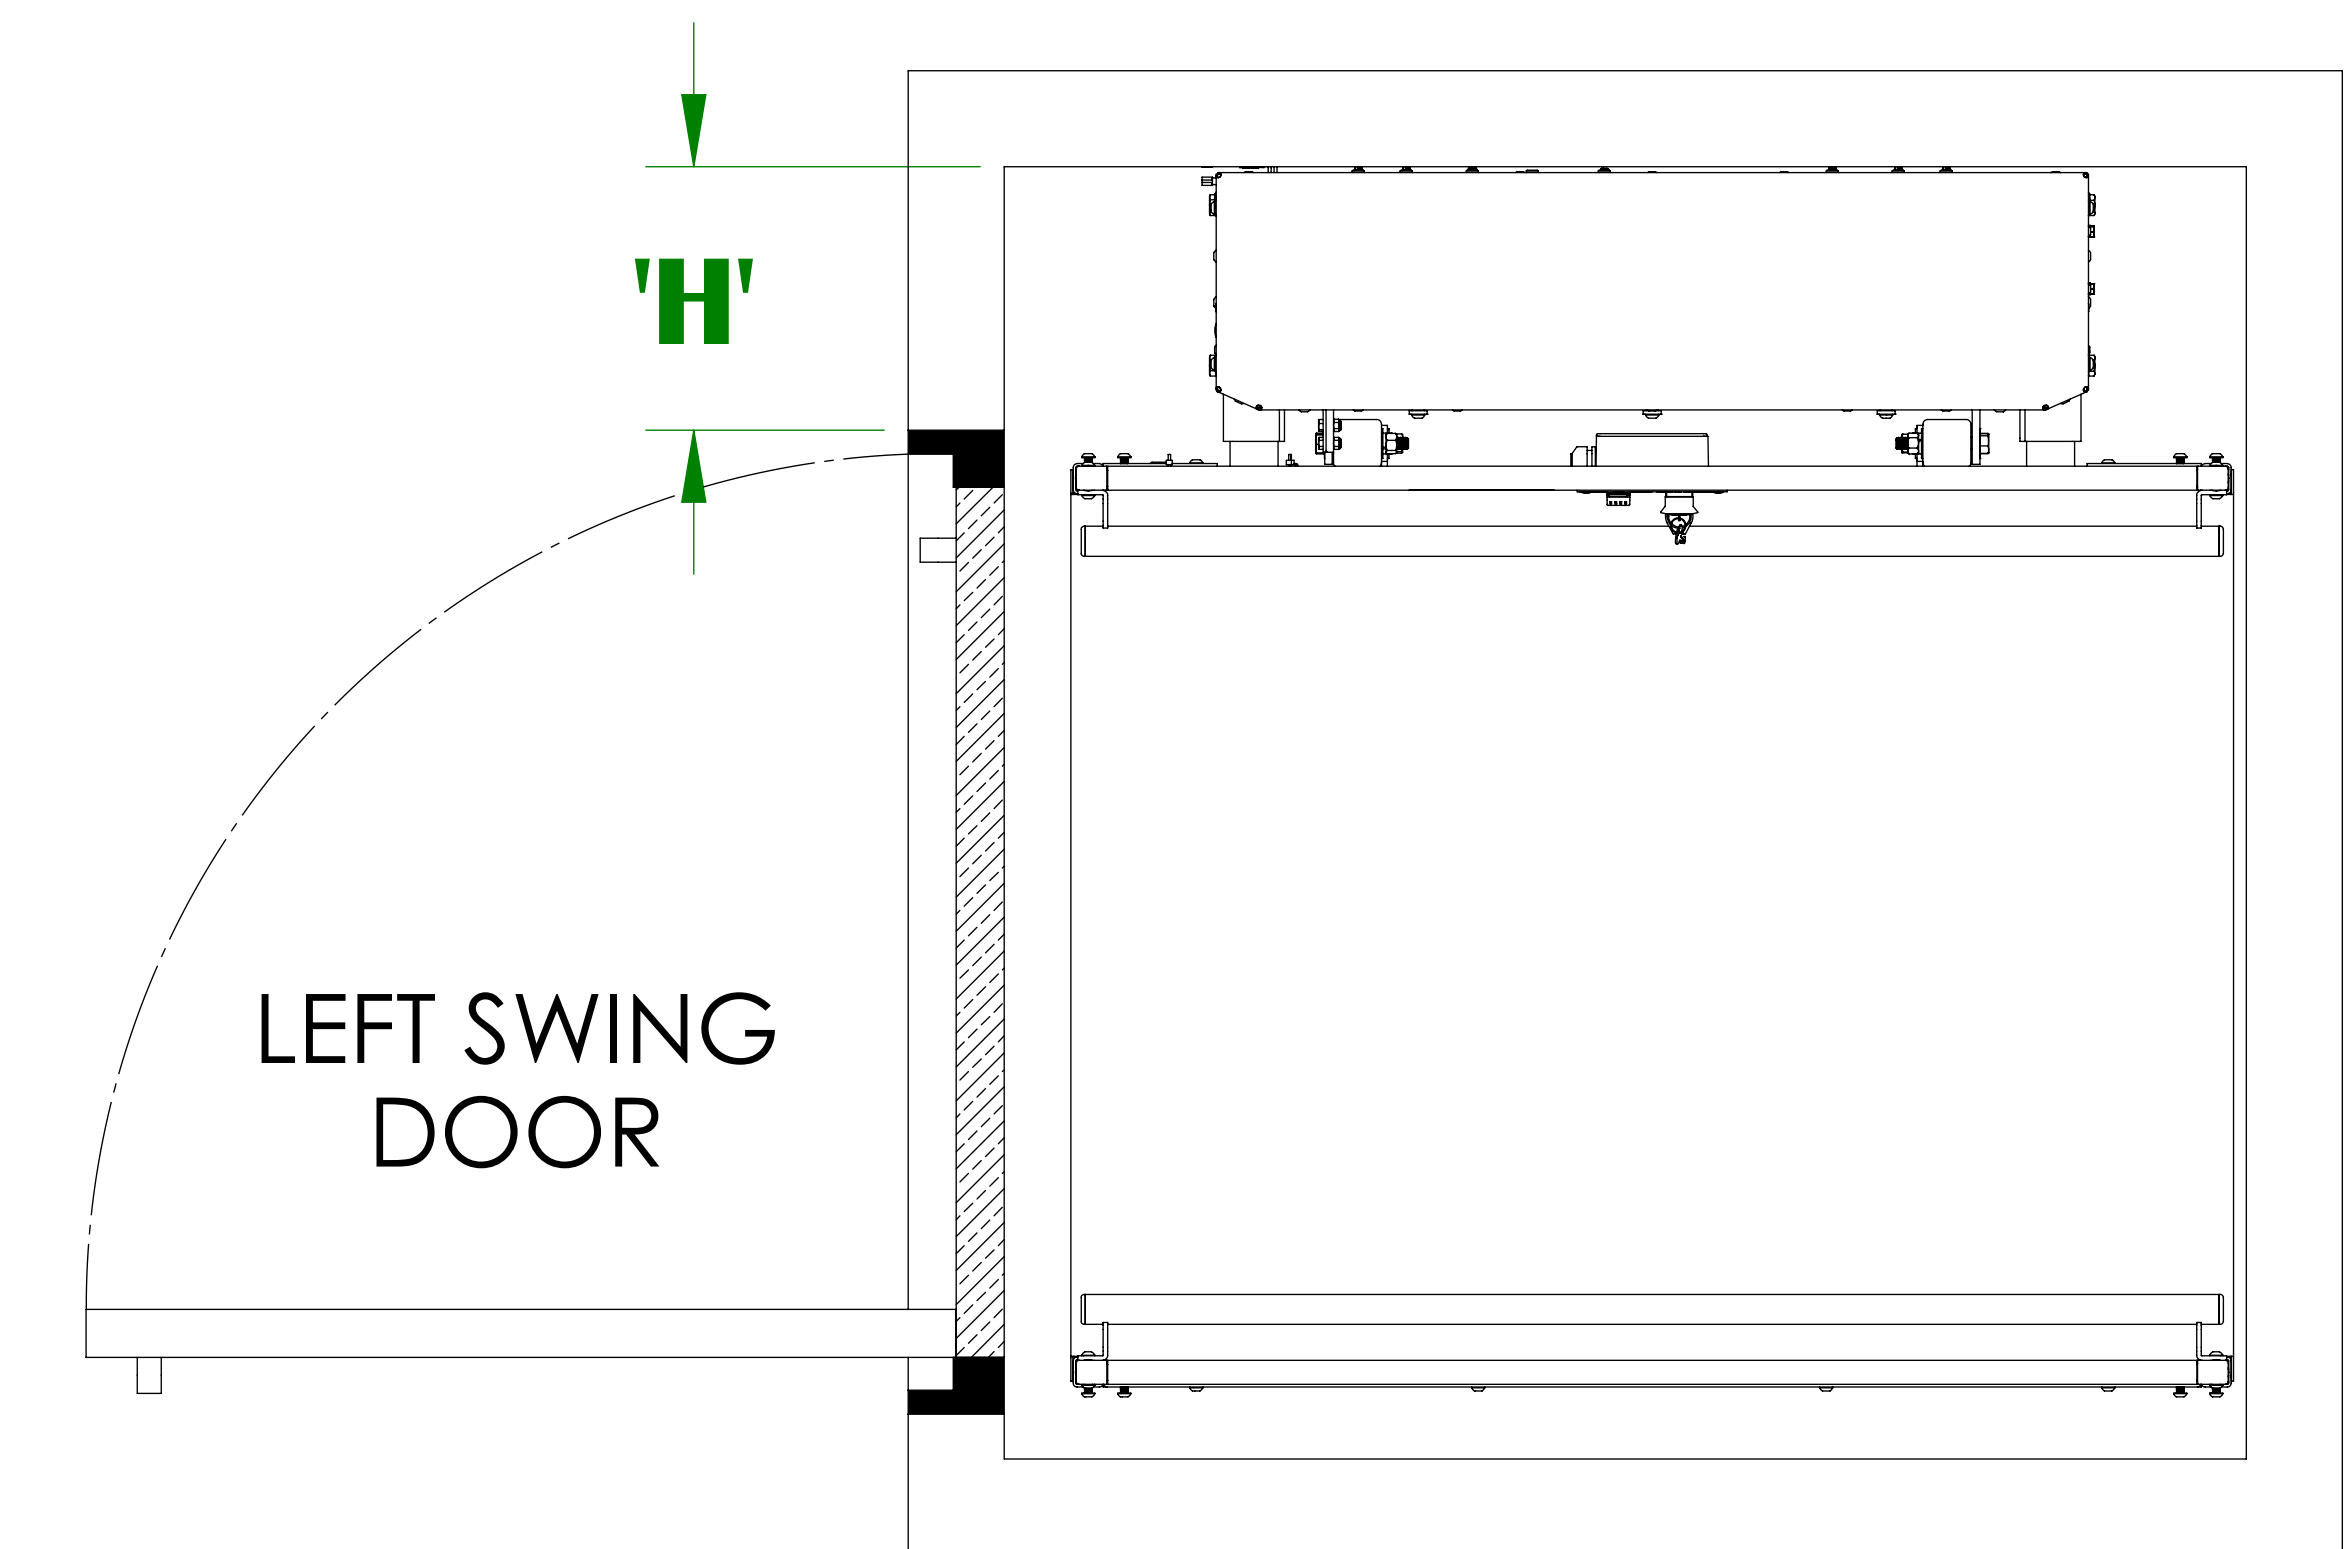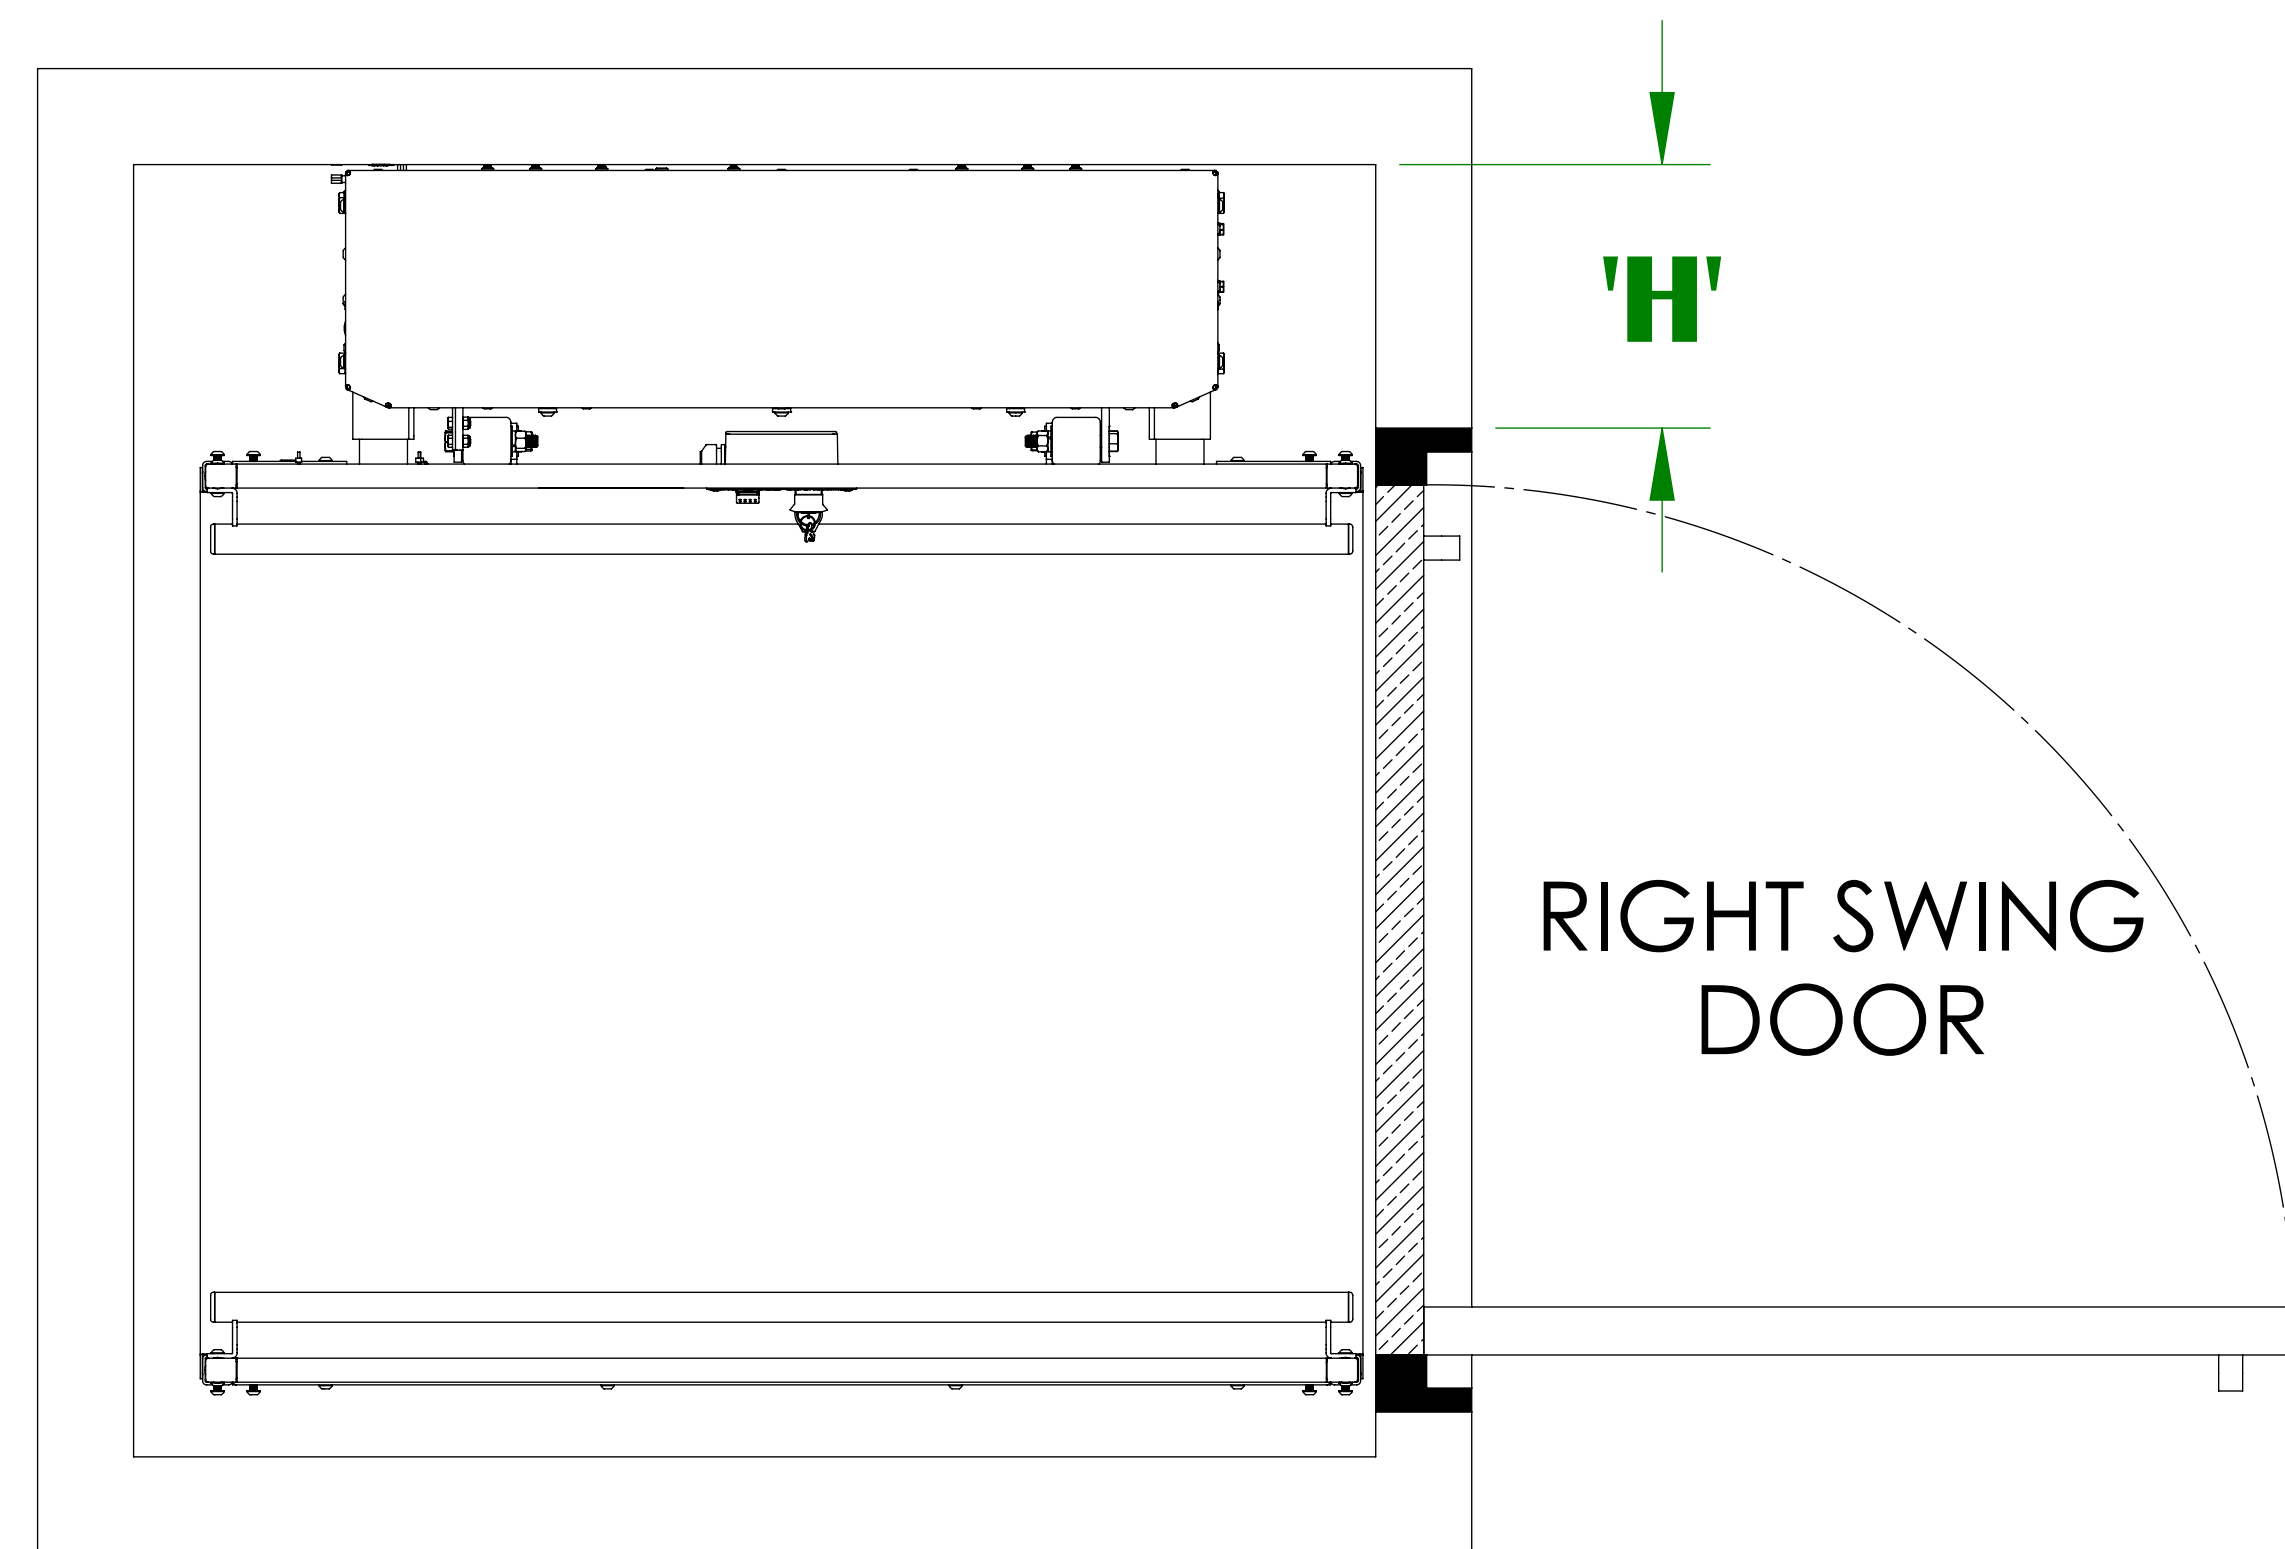

DOOR SIZE	DOOR LOCATION	DOOR SWING	LEFT HAND UNIT 'H'	RIGHT HAND UNIT 'H'
36"	LOWER LANDING	LEFT SWING DOOR	11-5/8"	9-1/8"
36"	LOWER LANDING	RIGHT SWING DOOR	9-1/8"	11-5/8"
36"	UPPER LANDING	LEFT SWING DOOR	11-5/8"	9-1/8"
36"	UPPER LANDING	RIGHT SWING DOOR	9-1/8"	11-5/8"
45"	LOWER LANDING	LEFT SWING DOOR	10-1/8"	7-5/8"
45"	LOWER LANDING	RIGHT SWING DOOR	7-5/8"	10-1/8"
45"	UPPER LANDING	LEFT SWING DOOR	10-1/8"	7-5/8"
45"	UPPER LANDING	RIGHT SWING DOOR	7-5/8"	10-1/8"